

bosal

**Инструкция
по монтажу тягово-сцепного
устройства шарового типа 1209 Н
для автомобилей
ВАЗ-2110; ВАЗ-2111; ВАЗ-2112
ВАЗ-21703 Lada Priora**

-2110, -2111, -2112	1996/1-...
-21703 Lada Priora	2007-...
	800
	75
	10,15

ФАРКОП.РФ

+7 (495) 669-38-36

.....
..... VIN



462800,

18

:(35363) 7-05-06

/(35363) 7-13-20

(495) 785-66-07


www.bosal-autoflex.ru

« - » (8182) 22-48-15
" 8(8442) 98-74-98
" 8(343) 379-39-89, 373-42-73
" 8(343) 26-88-308
" 8(3952) 710-194
" 8(495) 777-54-59
" 8(495) 745-79-11
" 8(495) 788-95-97
" 8(495) 720-51-03
" 8(3532) 57-99-85
" 8-905-899-5012
" 8(383) 291-59-60
" 8(831) 279-53-24
" 8(3422) 98-27-20
" 8(342) 220-87-87
" 8-927-002-90-06
" 8(3462) 24-00-44
" 8(3842) 21-14-76
" 8-902-940-4151
" 8(3452) 32-22-12, 41-52-62
" 8-961-213-0278
" 8-917-347-1700
" 8(351) 269-44-75, 900-72-73
" 8(3512) 773-76-91

41.55-2005.

d=18 ()

«b»
12 30.

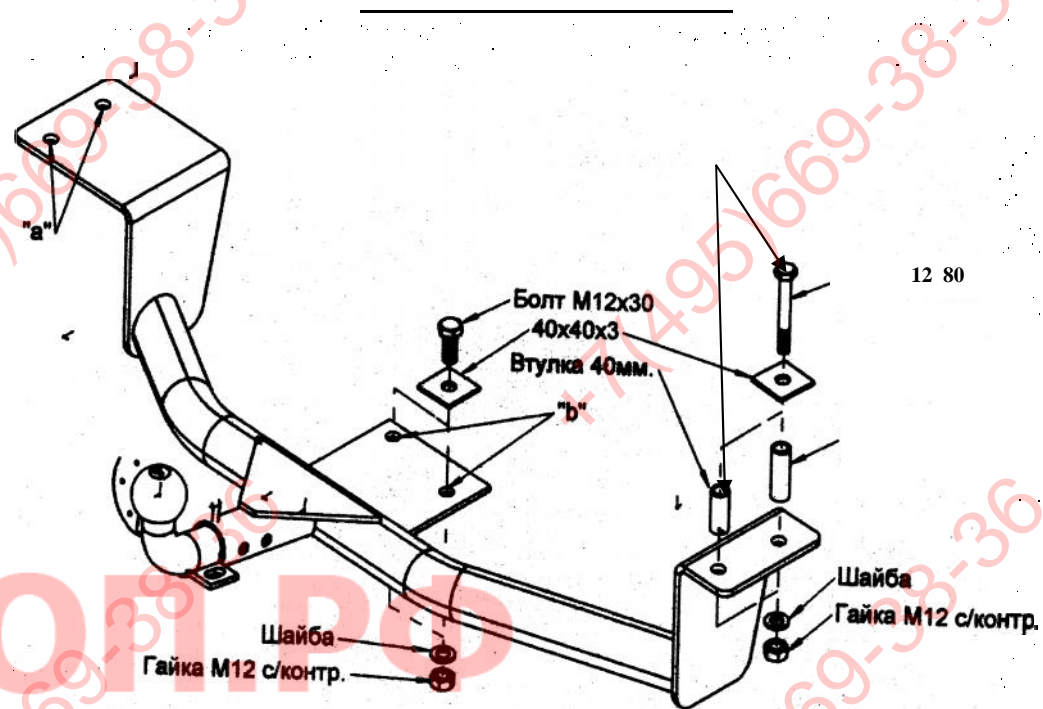

12 80

+7 (495) 669-38-36

	1
	1
	1

	3
12 30	2
12 80	4
12 (/)	6
12	6
12 40 40 3	6
L = 40	4
	1
	1
130	1
	1

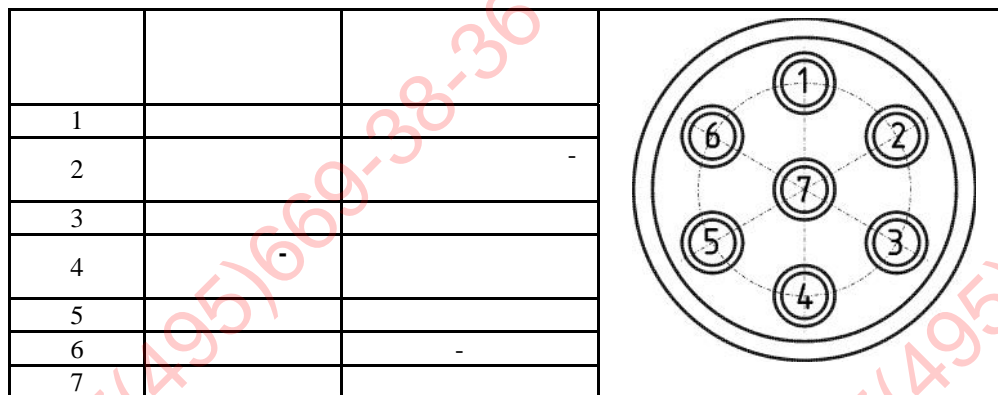


Схема обрезки кабеля

