

# bosal

**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 1216 Н  
для автомобилей  
ВАЗ-2113; -2114;  
-2115**

-2113	2003 -...
-2114	1999 -...
-2115	1997-...
	750
	75
	7,6

# ФАРКОМ.РФ

## +7 (495) 669-38-36

.....  
..... VIN .....



462800,

18

т. (35363) 7-05-06


ф. (35363) 7-13-20

т. (495) 785-66-07

[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)

- " (8182) 22-48-15
- " 8(8442) 98-74-98
- " 8(343) 379-39-89, 373-42-73
- " 8(343) 26-88-308
- " 8(3952) 710-194
- " 8(495) 777-54-59
- " 8(495)745-79-11
- " 8(495) 788-95-97
- " 8(495) 720-51-03
- " 8(3532) 57-99-85
- " 8-905-899-5012
- " 8(383) 291-59-60
- " 8(831) 279-53-24
- " 8(3422) 98-27-20
- " 8(342) 220-87-87
- " 8-927-002-90-06
- " 8(3462) 24-00-44
- " 8(3842) 21-14-76
- " 8-902-940-4151
- " 8(3452) 32-22-12, 41-52-62
- " 8-961-213-0278
- " 8-917-347-1700
- " 8(351) 269-44-75, 900-72-73
- " 8(3512) 773-76-91

41.55-2005.

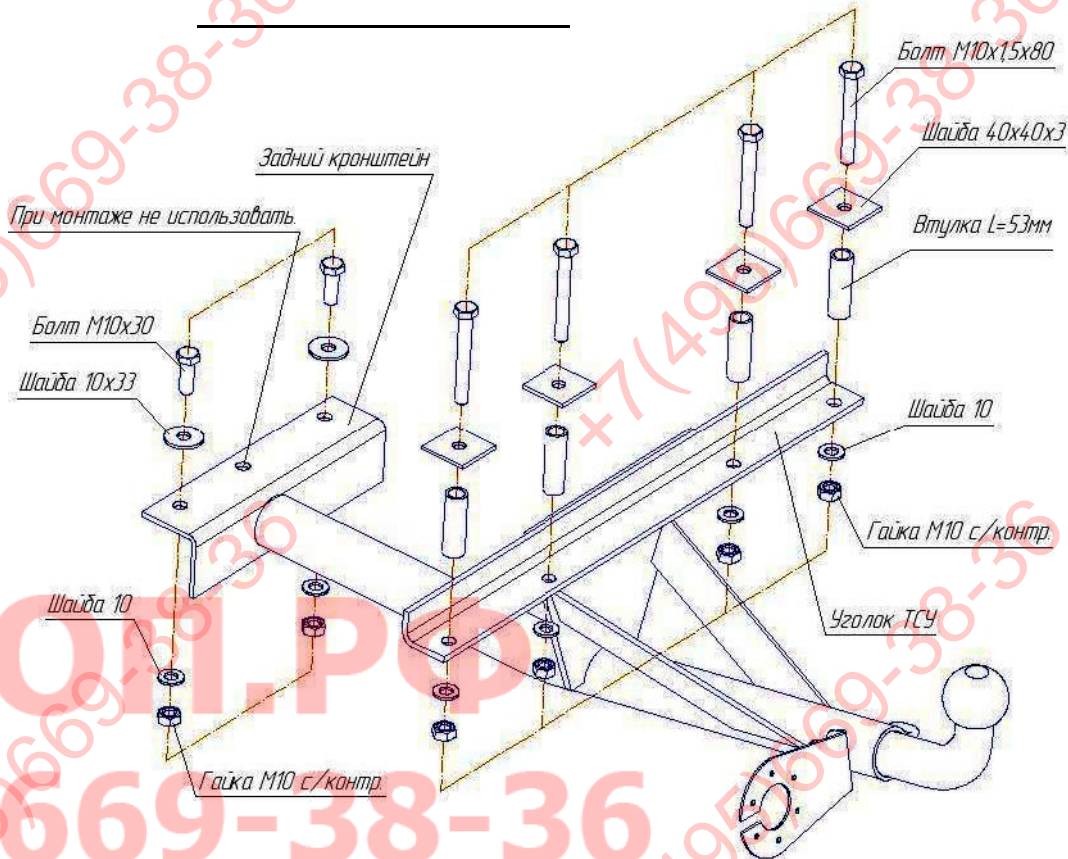


Ø11  
Ø 18 ( )  
10 80,  
L=53

Ø 11 ( )  
L=53  
Ø 18  
Ø 11  
10 30.

1			
2			
3			
4			
5			
6			

	1
	1
	1

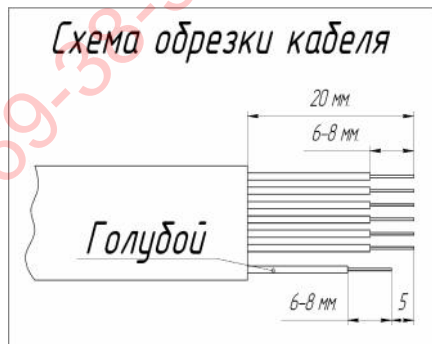

	3
10 30	2
10 80	4
10 /	6
10 ( )	2
10	6
10 40 40 3	4
L = 53	4
	1
130	1
	1
	1