

# bosal

**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 1923 А  
для автомобилей  
Skoda Octavia Scout;**

## ФАРКОМ.РФ

### +7 (495) 669-38-36

: Skoda Octavia Scout	2007-...
	1300
	60
	13,4

.....  
..... VIN .....



462800,

« - »  
18  
: (35363) 7-05-06  
/ : (35363) 7-13-20  
(495) 799-13-46  
www.bosal-autoflex.ru  
www.bosal.com


« - »	(8182) 22-48-15
"	8(8442) 98-74-98
"	8(343) 379-39-89, 373-42-73
"	8(343) 26-88-308
"	8(3952) 710-194
"	8(495) 777-54-59
"	8(495) 745-79-11
"	8(495) 788-95-97
"	8(495) 720-51-03
"	8(3532) 57-99-85
"	8-905-899-5012
"	8(383) 291-59-60
"	8(831) 279-53-24
"	8(3422) 98-27-20
"	8(342) 220-87-87
"	8-927-002-90-06
"	8(3462) 24-00-44
"	8(3842) 21-14-76
"	8-902-940-4151
"	8(3452) 32-22-12, 41-52-62
"	8-961-213-0278
"	8-917-347-1700
"	8(351) 269-44-75, 900-72-73
"	8(3512) 773-76-91

41.55-2005.

10 35.

10— 68 ; 12— 79  
1000

Skoda Octavia Scout).

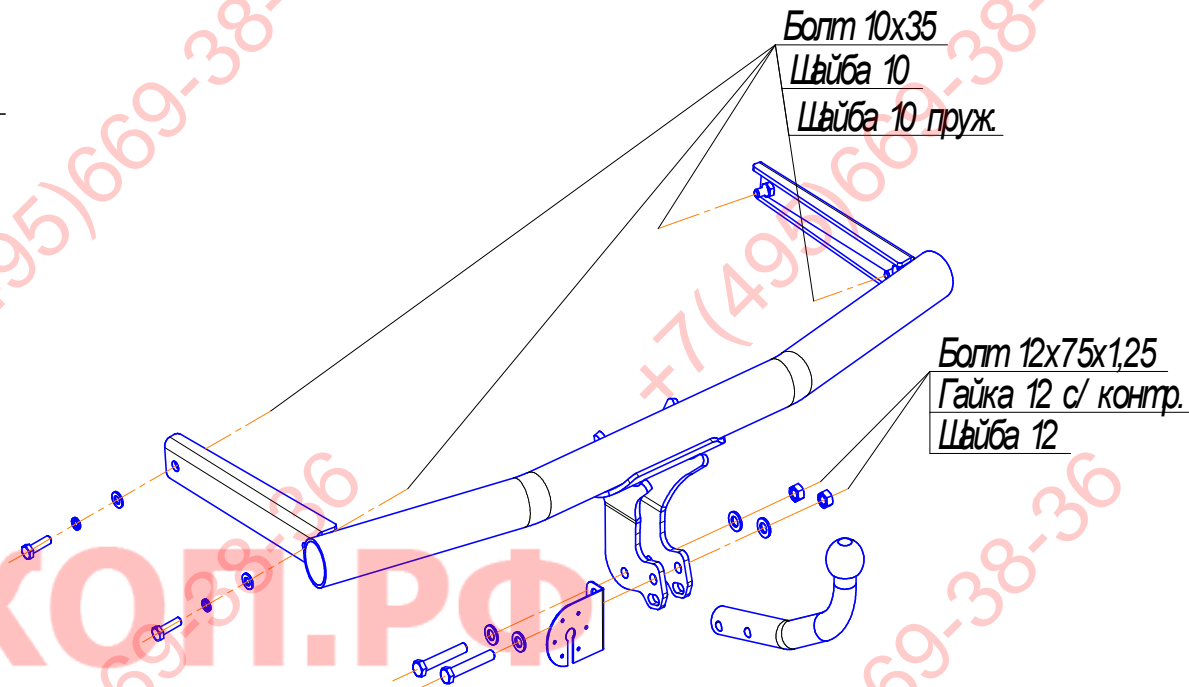

	1
	1
	1

4 35	3
4	3
4	3
4	3
12 1,25 75	2
10 35	4
12 1,25 /	2
12	4
10	4
10	4
0803	1
	1
	1
	1
	1

