

bosal

**Инструкция
по монтажу тягово-сцепного
устройства шарового типа 2527 А
для автомобилей
Peugeot Partner
Citroen Berlingo**

	1996/11– 2007/9
	1100
	75
	13,3

..... :

..... VIN

.....

.....




462800,

18

.. (35363) 7-05-06
/ : (35363) 7-13-20
(495) 785-66-07
www.bosal-autoflex.ru

« - »	(8182) 22-48-15
" - "	8(8442) 98-74-98
" - "	8(343) 379-39-89, 373-42-73
" - "	8(343) 26-88-308
" - "	8(3952) 710-194
" - "	8(495) 777-54-59
" - "	8(495) 745-79-11
" - "	8(495) 788-95-97
" - "	8(495) 720-51-03
" - "	8(3532) 57-99-85
" - "	8-905-899-5012
" - "	8(383) 291-59-60
" - "	8(831) 279-53-24
" - "	8(3422) 98-27-20
" - "	8(342) 220-87-87
" - "	8-927-002-90-06
" - "	8(3462) 24-00-44
" - "	8(3842) 21-14-76
" - "	8-902-940-4151
" - "	8(3452) 32-22-12, 41-52-62
" - "	8-961-213-0278
" - "	8-917-347-1700
" - "	8(351) 269-44-75, 900-72-73
" - "	8(3512) 773-76-91

41.55-2005.

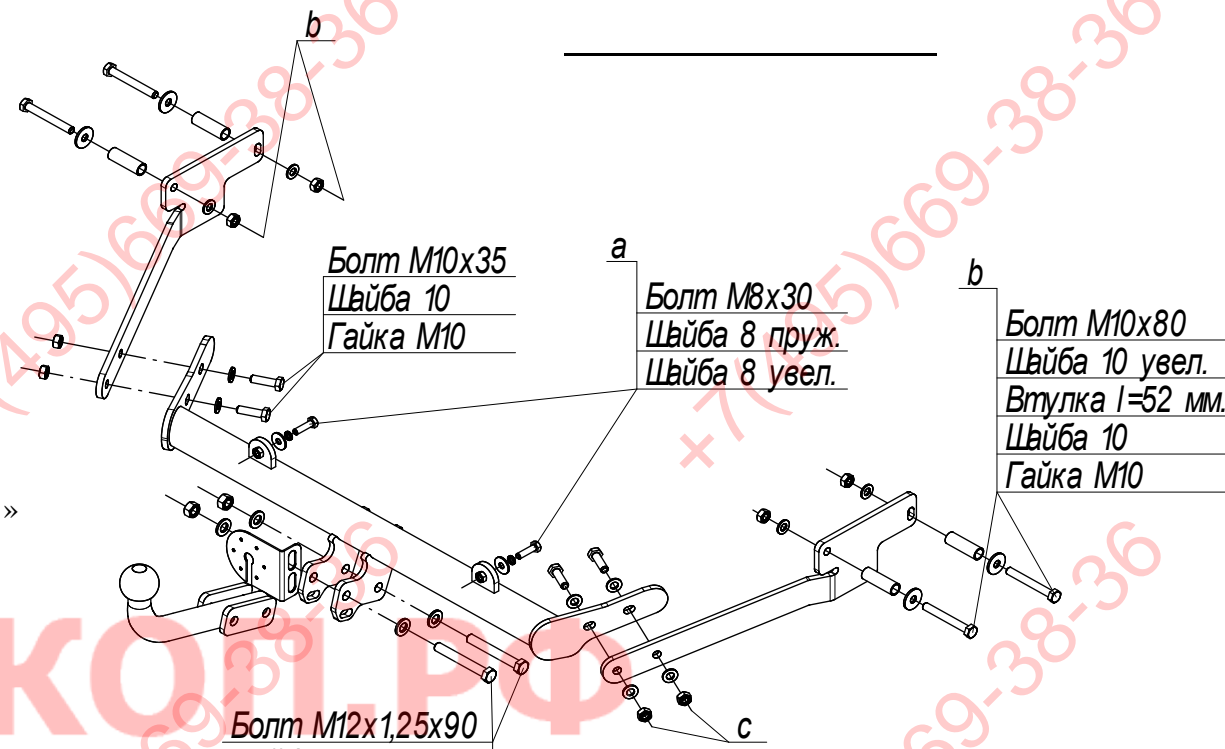

Болт М10х35
Шайба 10
Гайка М10

Болт М8х30
Шайба 8 пруж.
Шайба 8 увел.

Болт М10х80
Шайба 10 увел.
Втулка l=52 мм.
Шайба 10
Гайка М10

Болт М12х1,25х90
Шайба 12
Гайка М12х1,25

«b», «c»
ФАРКОЛ
+7 (495) 669-38-36

	1
	1
	1

8 30	2
10 35	4
10 80	4
12 1,25 90	2
10	8
12 1,25	2
8	2
8	2
10	4
10	12
12	4
l=52	4
VH 0164	1
	2
	1
	1
	3
	1
190	1
	1
	1

