

bosal

**Инструкция
по монтажу тягово-сцепного устройства
шарового типа 2551 А
для автомобилей
Citroen Berlingo 2
Peugeot Partner 2**

ФАРКОМ.РФ

+7 (495) 669-38-36

	05/2008--
	1200
	50
	19,2

.....
..... VIN



462800,

18

:(35363) 7-05-06


/(35363) 7-13-20

(495) 785-66-07

www.bosal-autoflex.ru

« - » (8182) 22-48-15
" 8(8442) 98-74-98
" 8(343) 379-39-89, 373-42-73
" 8(343) 26-88-308
" 8(3952) 710-194
" 8(495) 777-54-59
" 8(495) 745-79-11
" 8(495) 788-95-97
" 8(495) 720-51-03
" 8(3532) 57-99-85
" 8-905-899-5012
" 8(383) 291-59-60
" 8(831) 279-53-24
" 8(3422) 98-27-20
" 8(342) 220-87-87
" 8-927-002-90-06
" 8(3462) 24-00-44
" 8(3842) 21-14-76
" 8-902-940-4151
" 8(3452) 32-22-12, 41-52-62
" 8-961-213-0278
" 8-917-347-1700
" 8(351) 269-44-75, 900-72-73
" 8(3512) 773-76-91

41.55-2005.

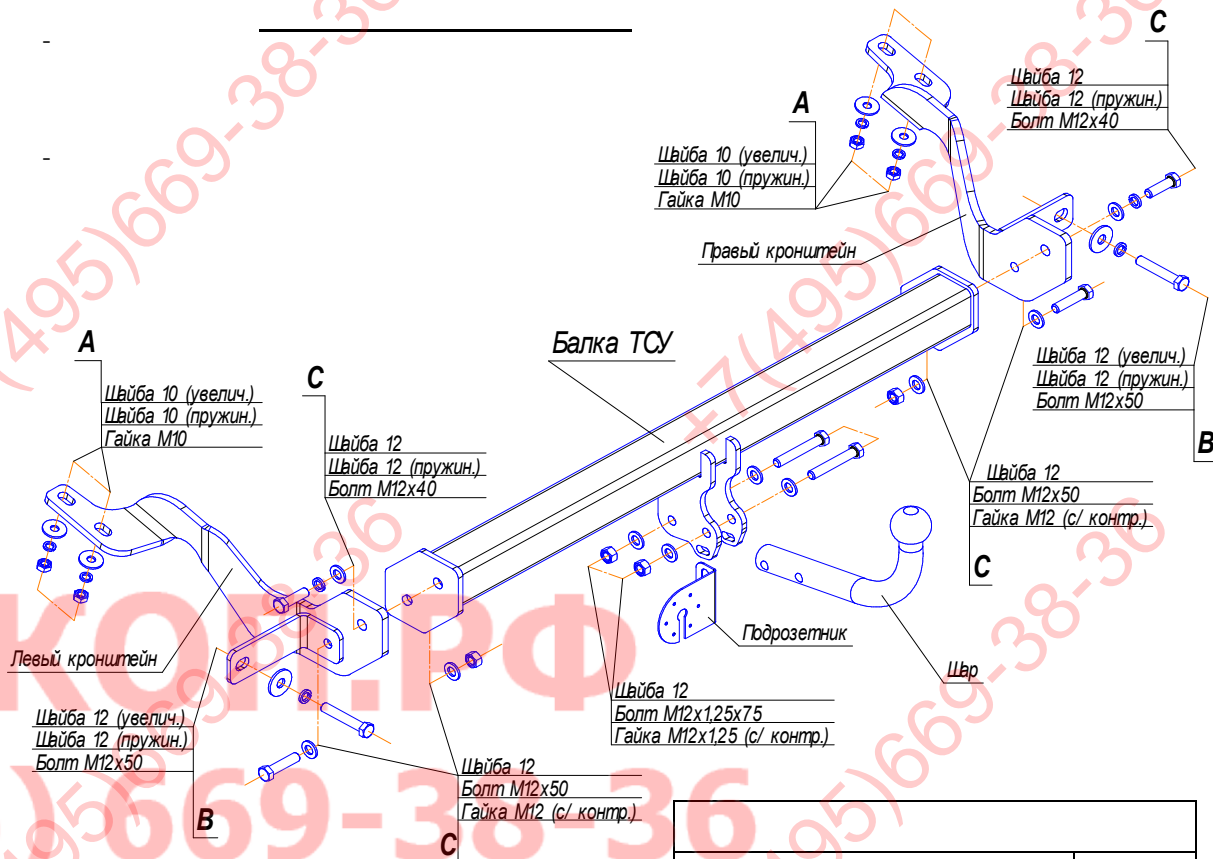

: 10 = 46 Nm; 12 = 79

Nm; 12 1,25 = 95 Nm.

	1 .
	1 .
	1 .
	1 .
	1 .

4	3 .
4	3 .
4	3 .
4 35	3 .
12 40	2 .
12 50	4 .
12 1,25 75	2 .
10	4 .
12 /	2 .
12 1,25 /	2 .
10 (.)	4 .
10 (.)	4 .
12	10 .
12 (.)	2 .
12 (.)	4 .
VH 0867	1 .
	1 .
	1 .
	1 .
190	1 .
	1 .

