

bosal

**Инструкция по монтажу
тягово-сцепного устройства
шарового типа 3508 А
для автомобилей
Audi 100 Estate(Avant),Saloon
(+Quattro)
Audi A6 Estate(Avant)+Quattro**

: Audi 100 Estate(Avant),Saloon (+ Quattro)	1990/12-1994
Audi A6 Estate (Avant) + Quattro	1994-1998/3
	1500
	75
	21,4

..... :

..... VIN

.....

.....




462800,

« - »
18
: (35363) 7-05-06
/ : (35363) 7-13-20
(495) 785-66-07
www.bosal-autoflex.ru

- « - » (8182) 22-48-15
- " 8(8442) 98-74-98
- " 8(343) 379-39-89, 373-42-73
- " 8(343) 26-88-308
- " 8(3952) 710-194
- " 8(495) 777-54-59
- " 8(495)745-79-11
- " 8(495) 788-95-97
- " 8(495) 720-51-03
- " 8(3532) 57-99-85
- " 8-905-899-5012
- " 8(383) 291-59-60
- " 8(831) 279-53-24
- " 8(3422) 98-27-20
- " 8(342) 220-87-87
- " 8-927-002-90-06
- " 8(3462) 24-00-44
- " 8(3842) 21-14-76
- " 8-902-940-4151
- " 8(3452) 32-22-12, 41-52-62
- " 8-961-213-0278
- " 8-917-347-1700
- " 8(351) 269-44-75, 900-72-73
- " 8(3512) 773-76-91

41.55-2005.

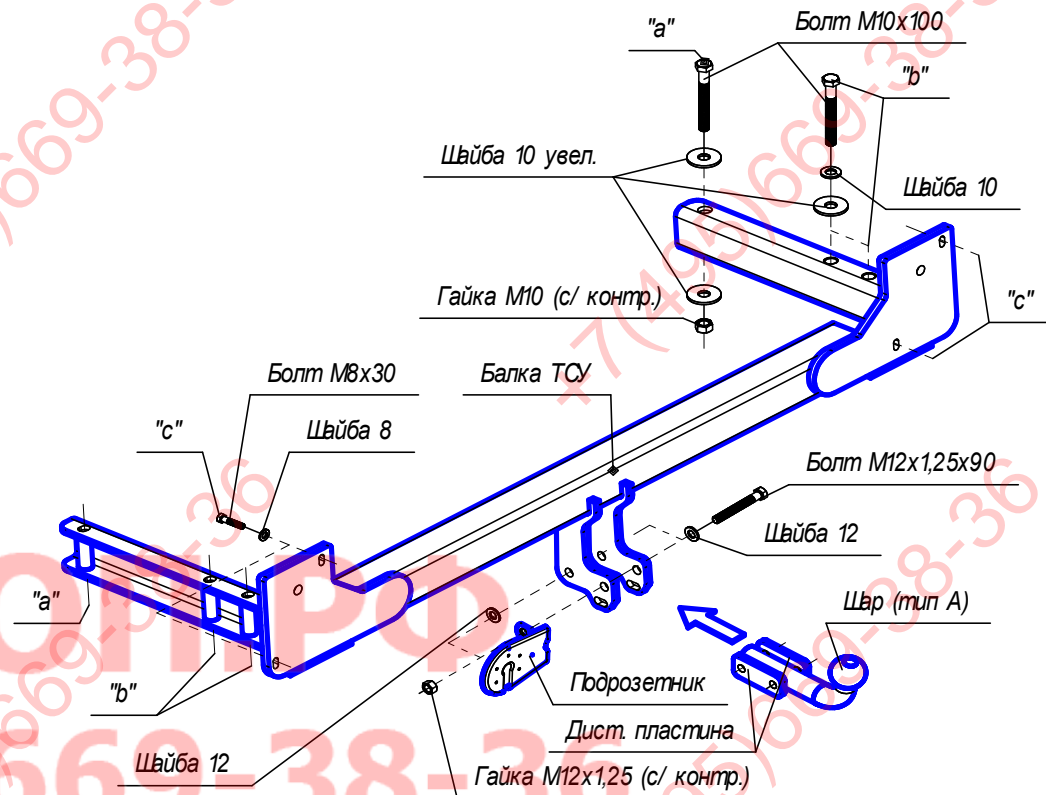


ФАРКОМ

1			
2			
3			
4			
5			
6			
7			

	1
	1
	1

Схема обрезки кабеля

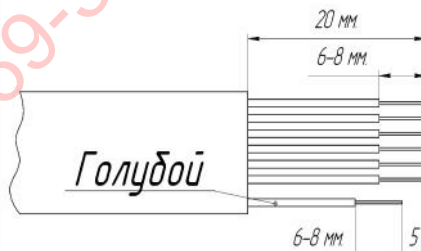

	3
12 1,25 /	2
10 /	2
10	8
10 (.)	4
12	4
8	4
12 90 1,25	2
10 100	6
8 30	4
	2
VH0181	1
	1
	1
190	1
	1