


Fitting instructions

Make: Hyundai


Santa Fe (CM); 2006-2011

Type: 5184

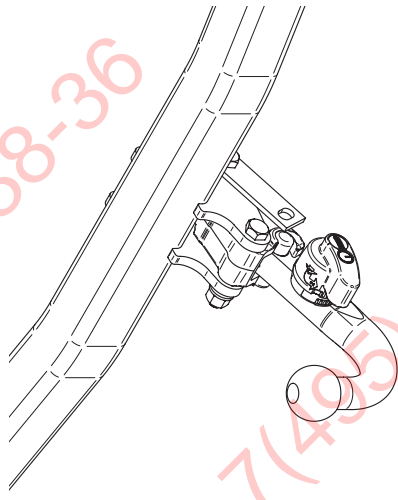

ФАРКОГ.РФ


+7 (495) 669-38-36

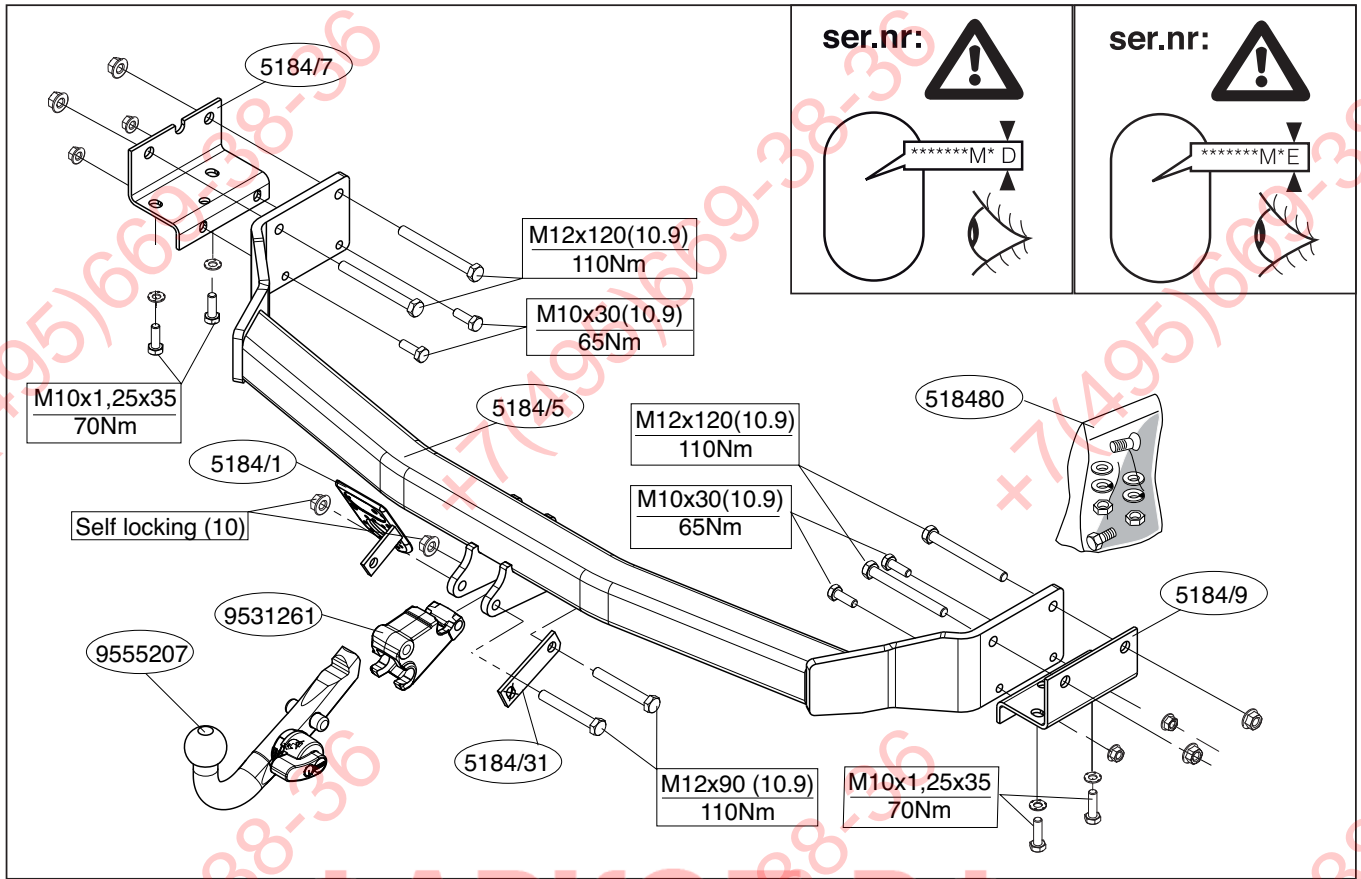

© 518470/25-01-2012/1


ФАРКОП.РФ

+7 (495) 669-38-36

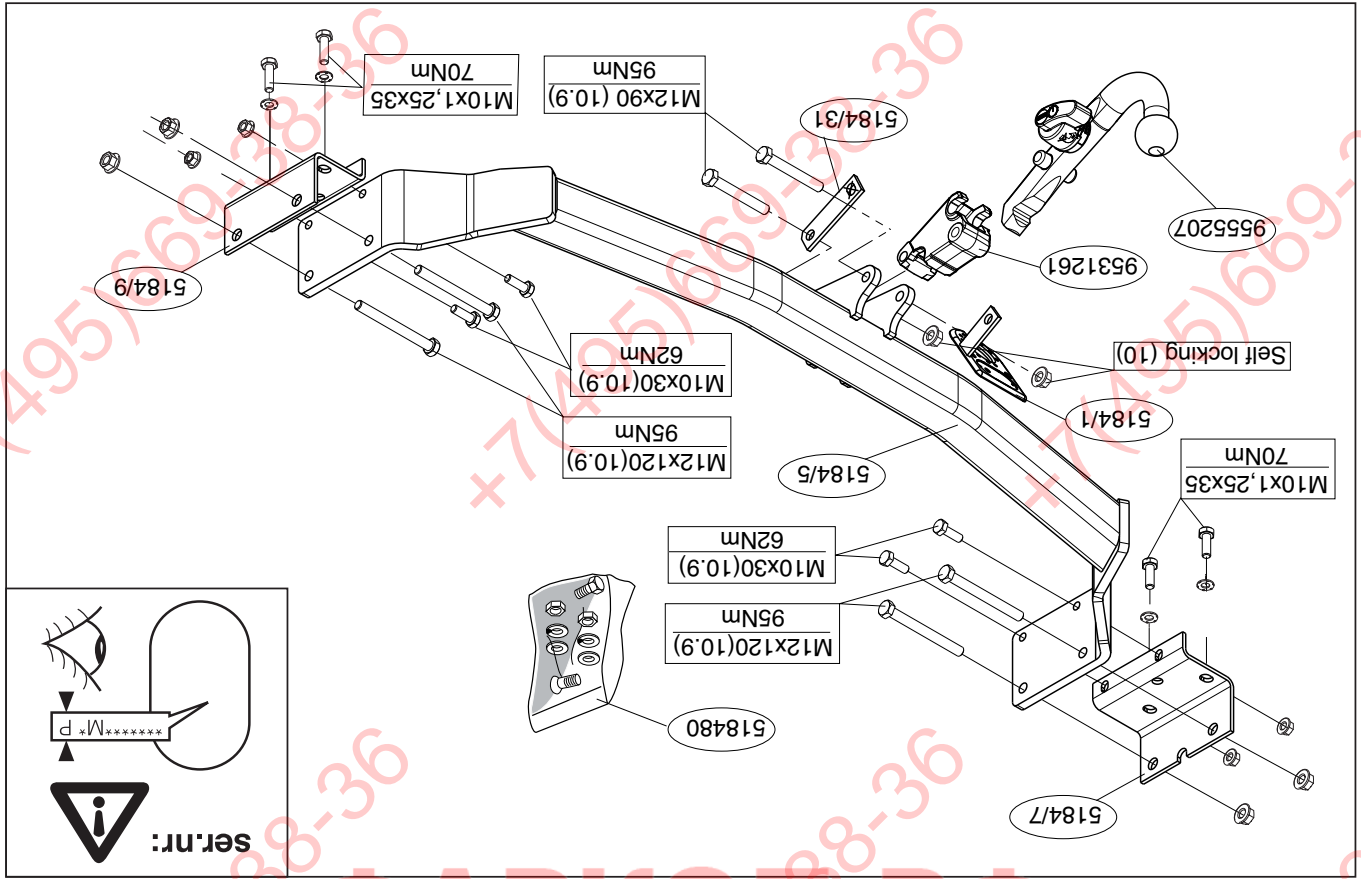

ФАРКОП.РФ







+7 (495) 669-38-36

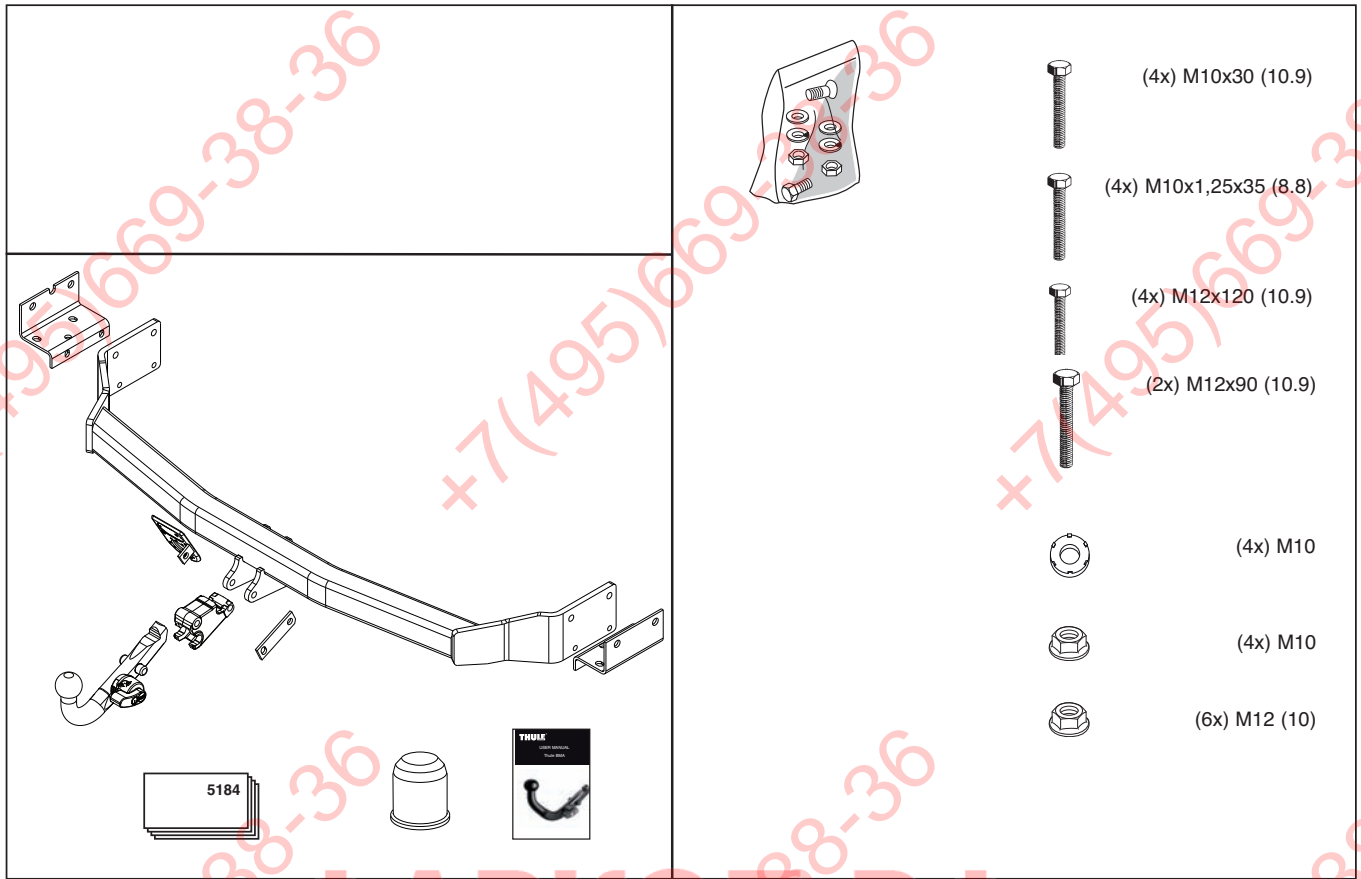


© 518470/25-01-2012/3

ФАРКОП.РФ

+7 (495) 669-38-36

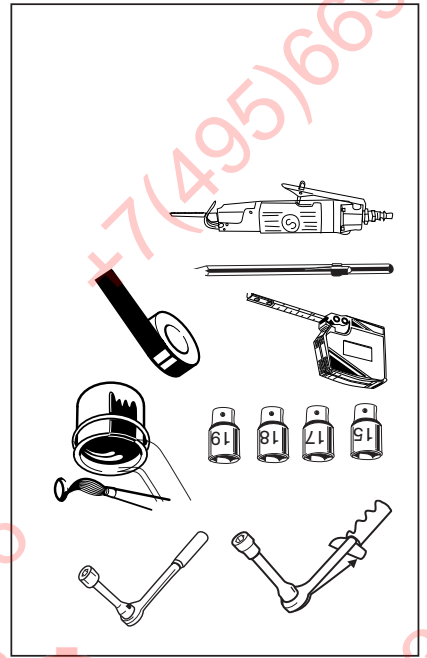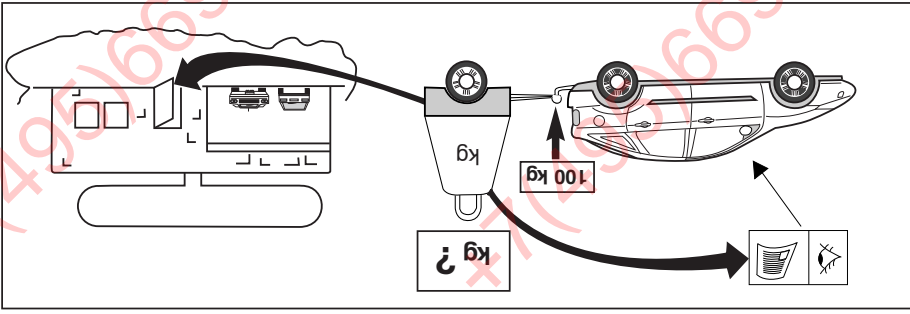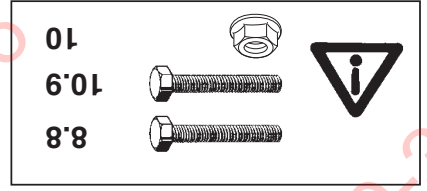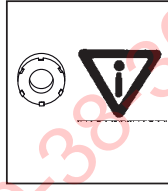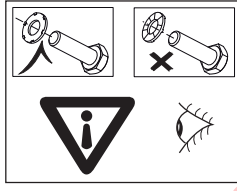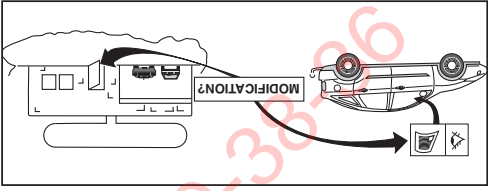


D-Value : 12,5 KN

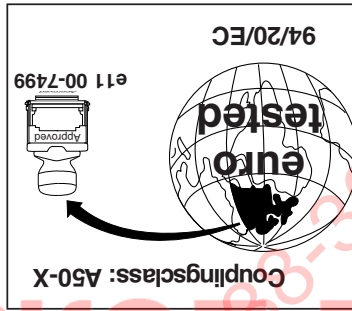


ФАРКОП.РФ

+7 (495) 669-38-36

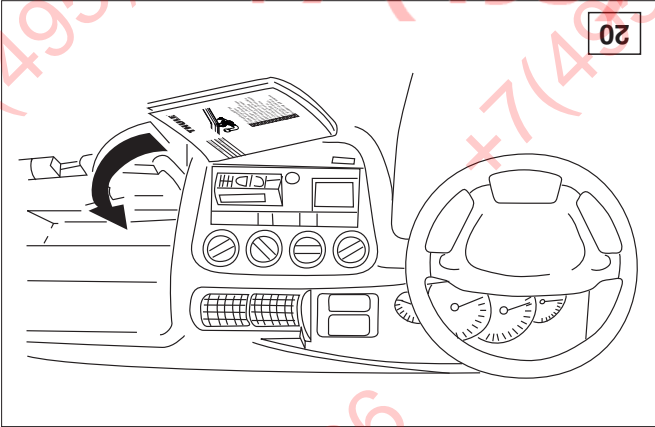


20

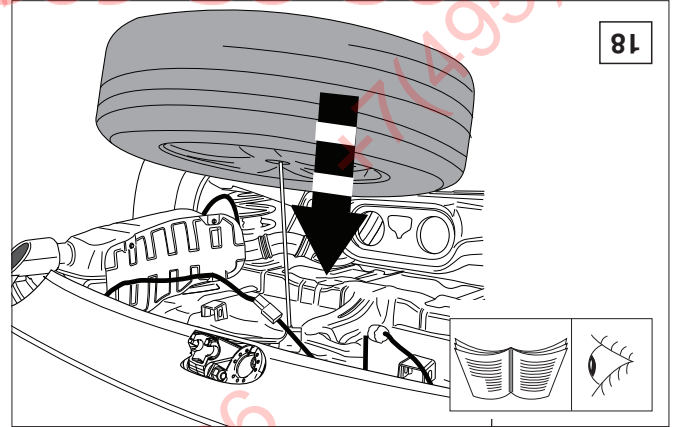

18



19

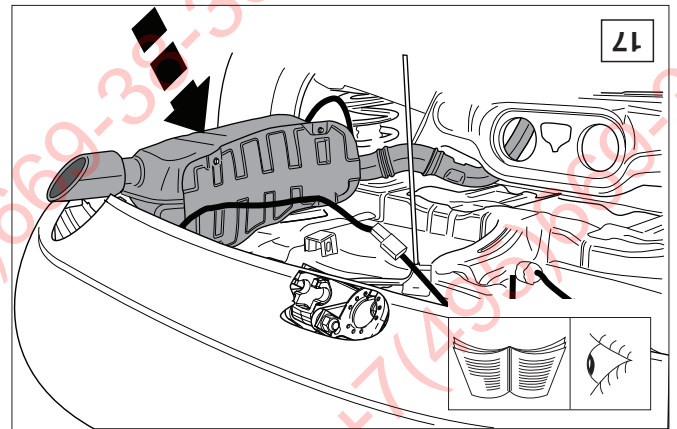

17



HINWEISE:

- * Die für das Fahrzeug zugelassene Anhängelast ist den Fahrzeug Unterlagen zu entnehmen. Bei Änderungen des Fahrzeuggewichtes muß die höchstzulässige Anhängelast gegebenenfalls aus dem D-Wert nachgerechnet werden.
- * Auskunft hierüber kann Ihr Fachhändler oder der TÜV geben.
- * Elektrische Anlage gemäß StVZO anbringen.

NOTE:


- * Should this installation process entail the cutting of the bumper – conformation MUST be obtained by the installation engineer of the customer's acceptance prior to completion. Thule Towing Systems do not accept responsibility for any matters arising as a result of this miscommunication.

All measurements are in mm!


ФАРКОГ.РФ

© 518470/25-01-2012/5

+7 (495) 669-38-36

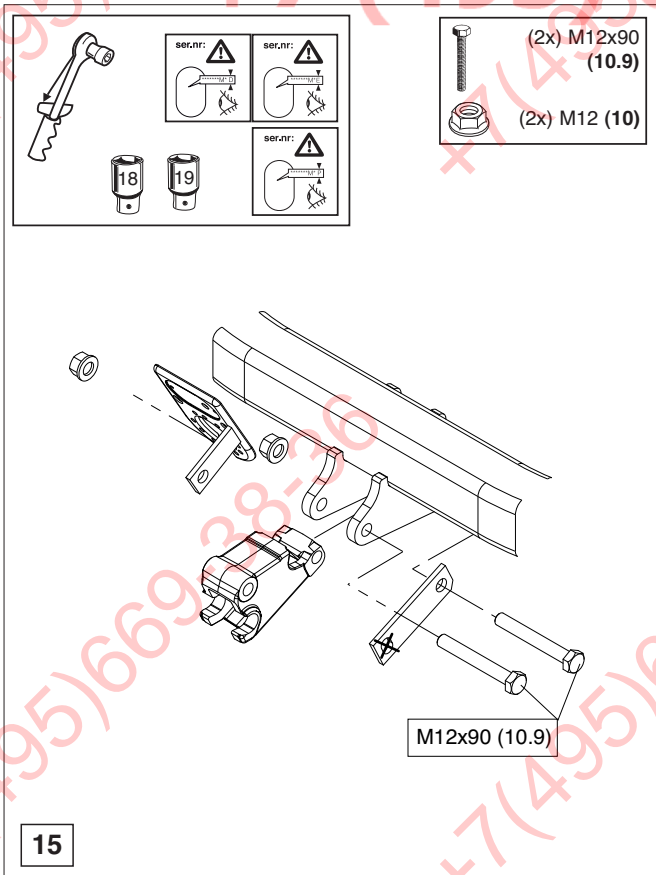



15

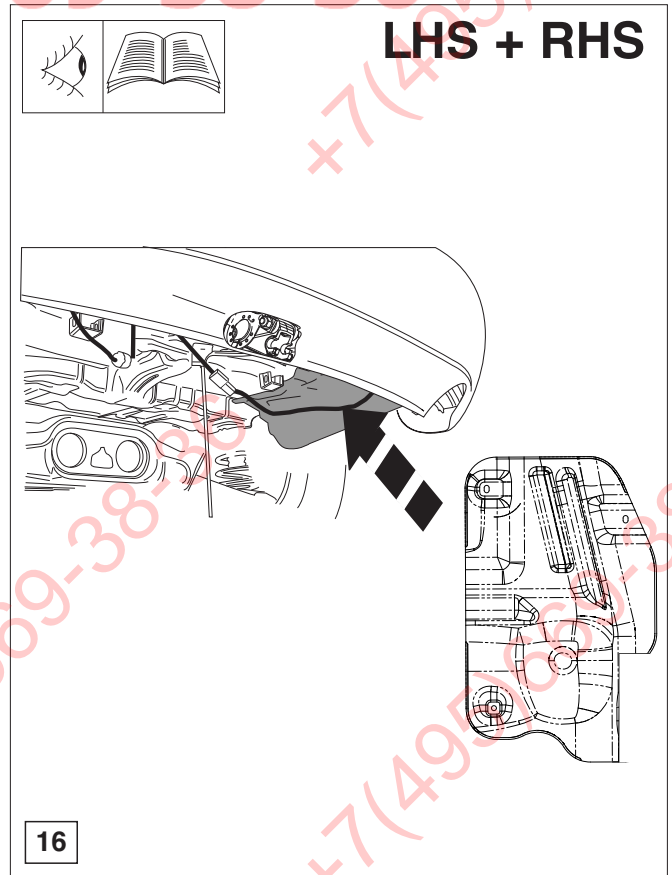

LHS + RHS


16

© 518470/25-01-2012/14

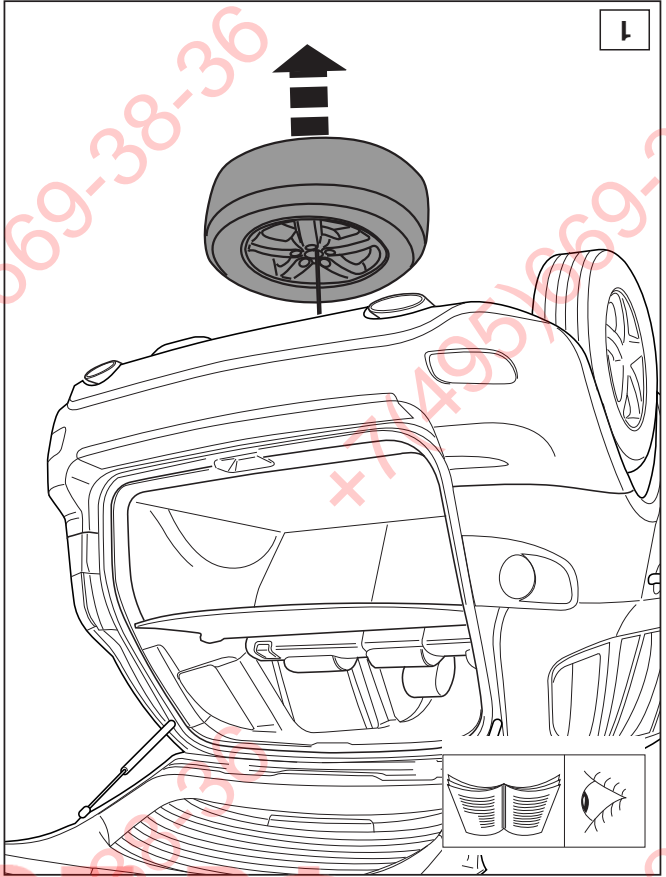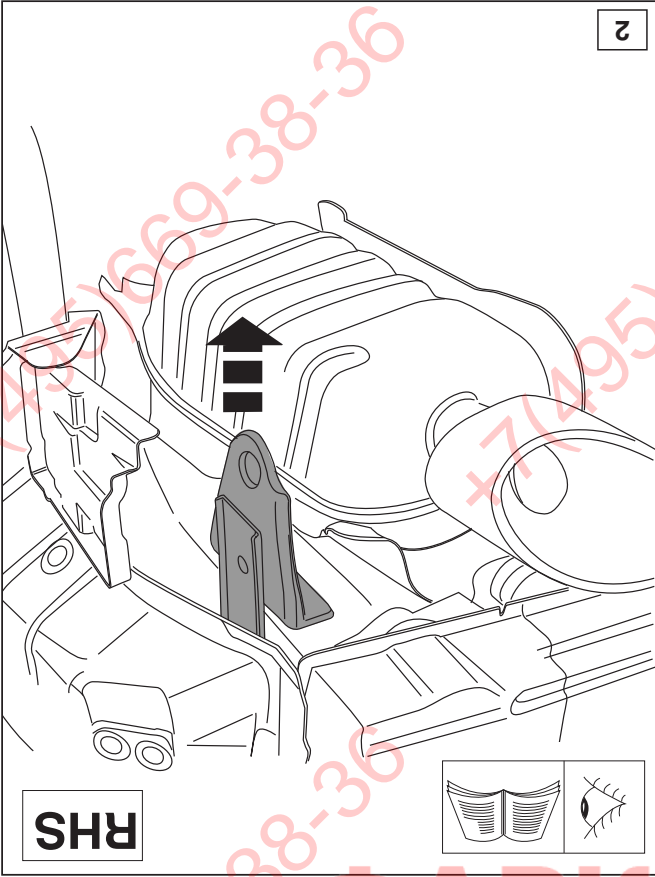

ΦΑΡΚΟΤ.ΡΦ

+7 (495) 669-38-36

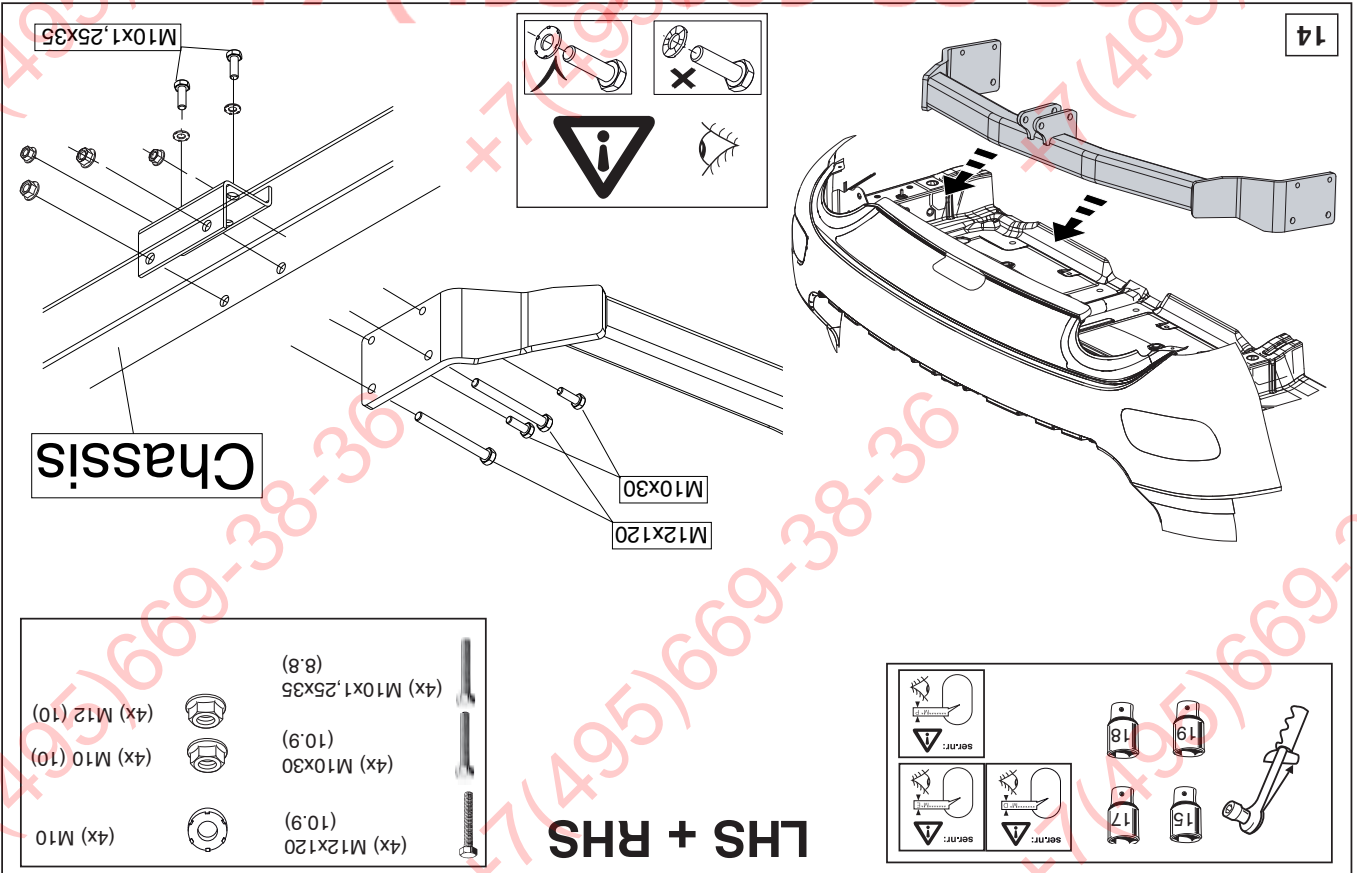

M10x1,25x35

Chassis



M10x30

M12x120

- (4x) M12x120 (10,9)
- (4x) M10x30 (10,9)
- (4x) M12 (10)
- (4x) M10x1,25x35 (8,8)

LHS + RHS


- (15)
- (17)
- (18)
- (19)

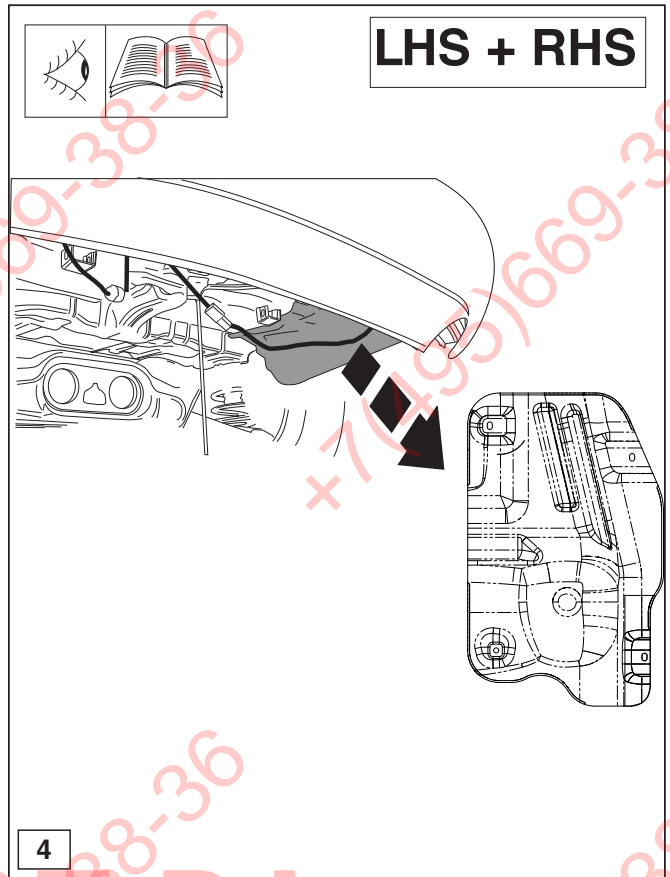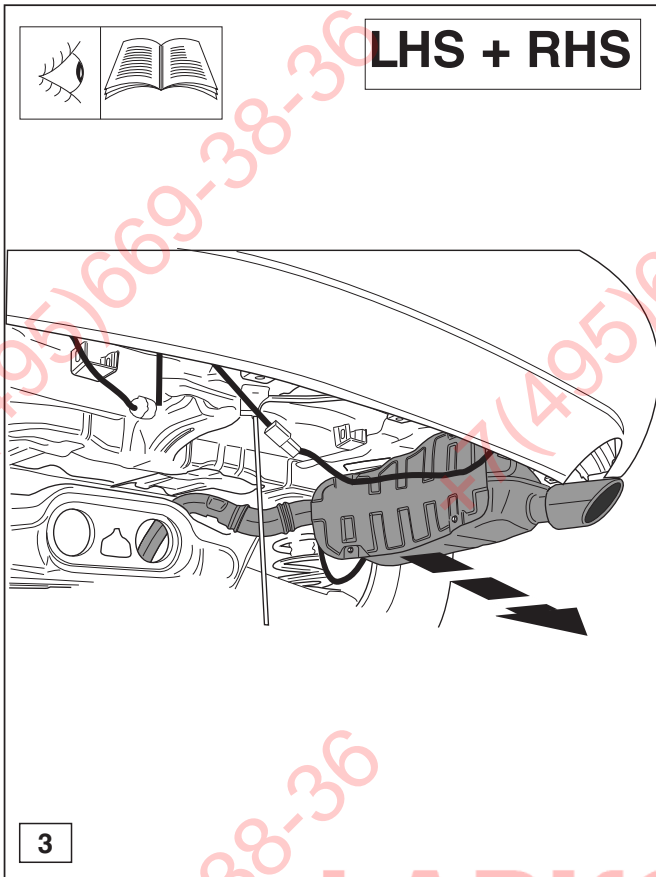





© 518470/25-01-2012/7

ФАРКОП.РФ

+7 (495) 669-38-36


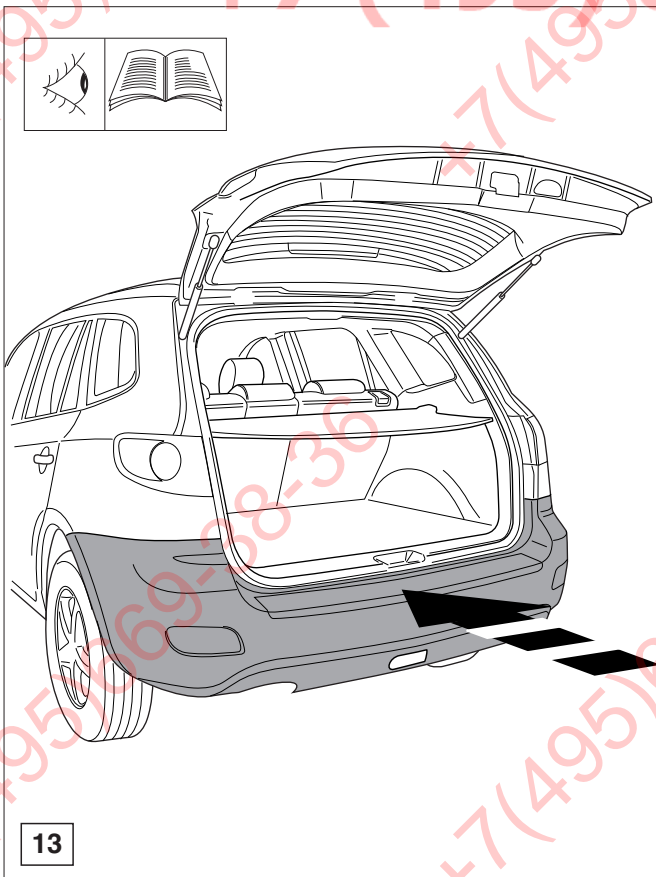


© 518470/25-01-2012/12

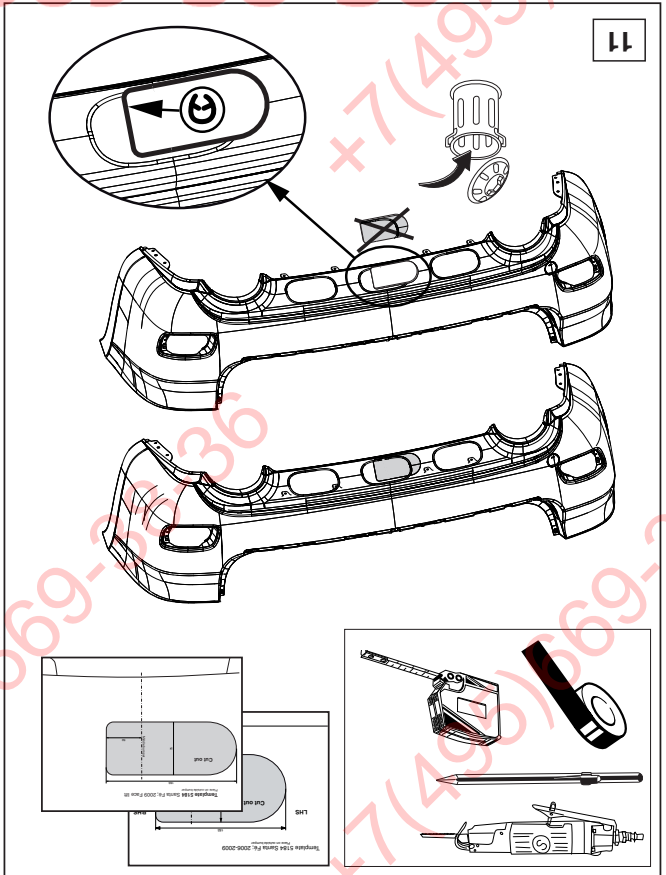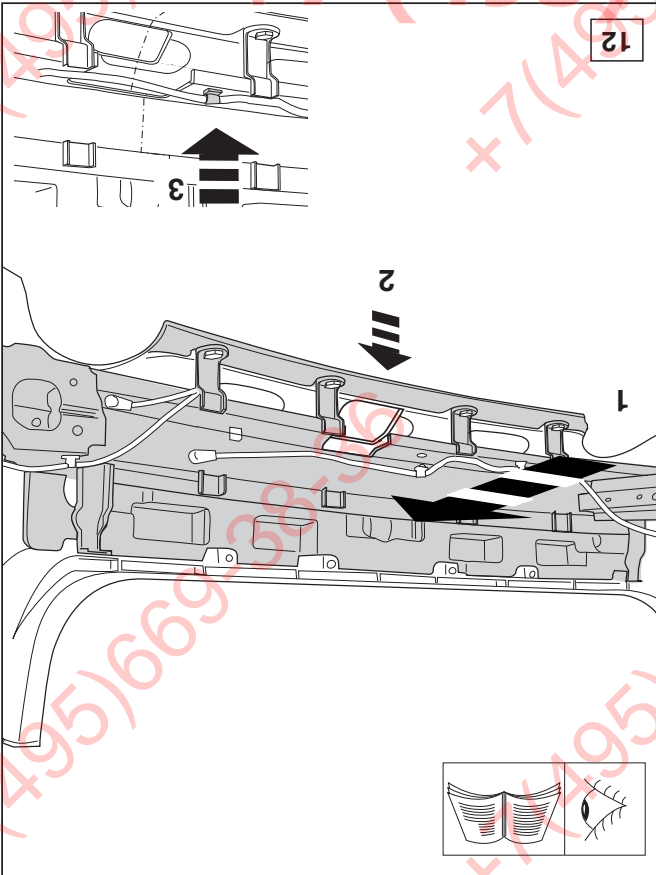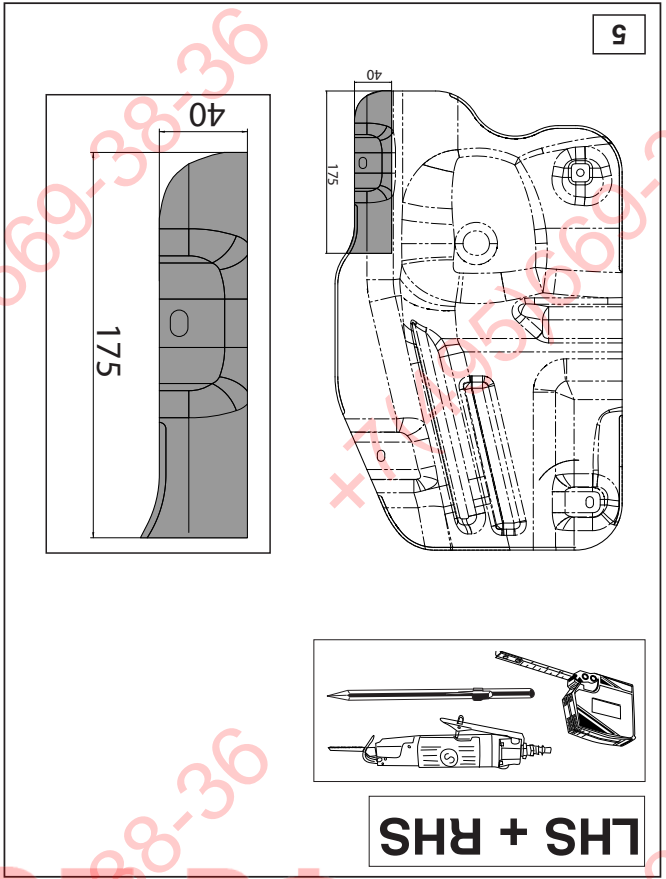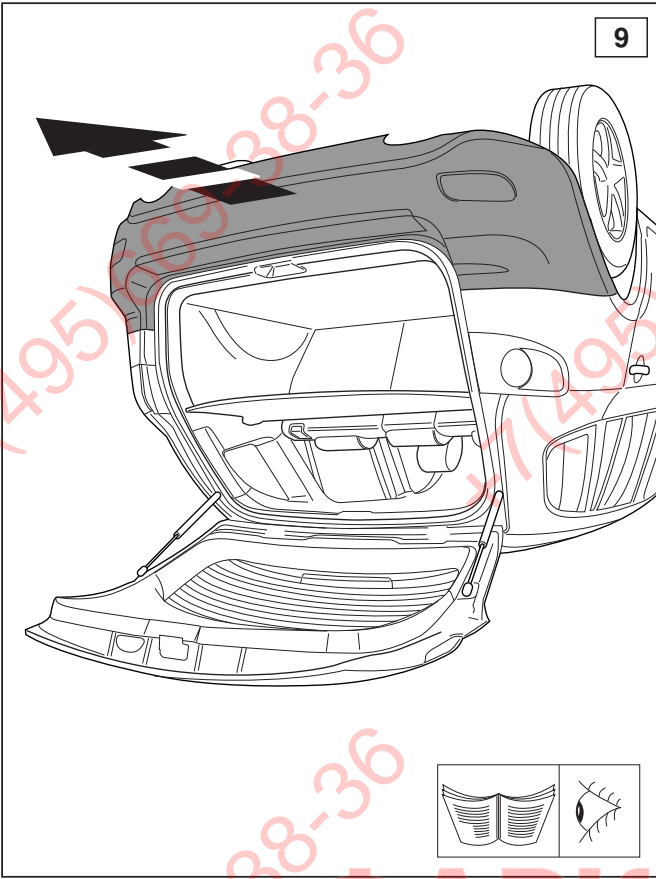

ФАРКОП.РФ



+7 (495) 669-38-36

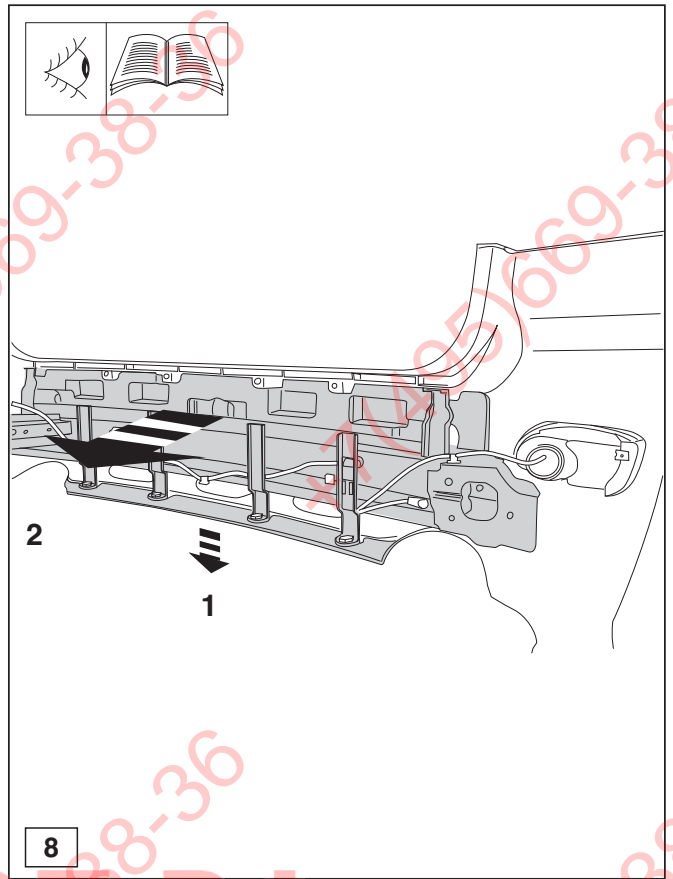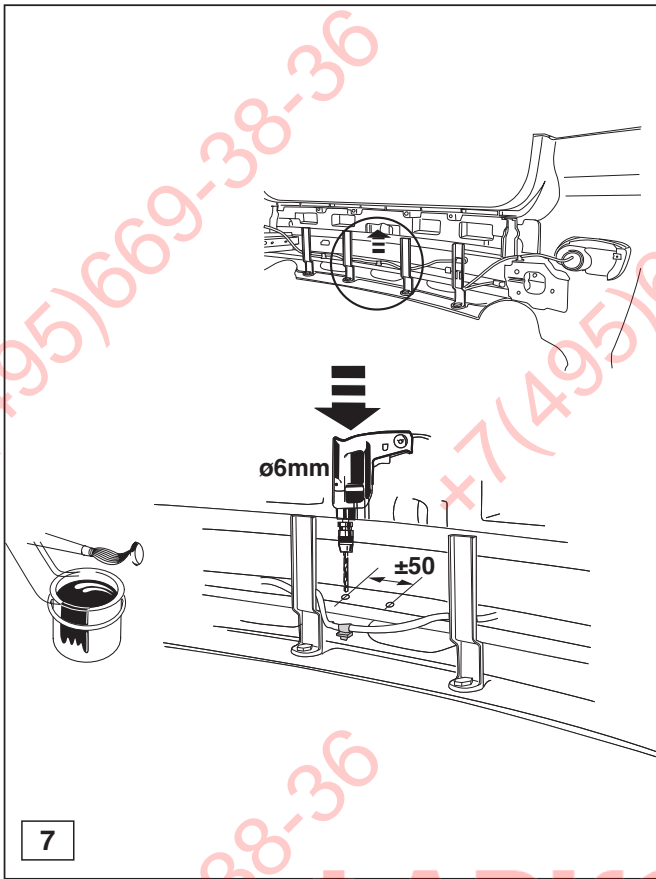

© 518470/25-01-2012/9

ФАРКОП.РФ

+7 (495) 669-38-36

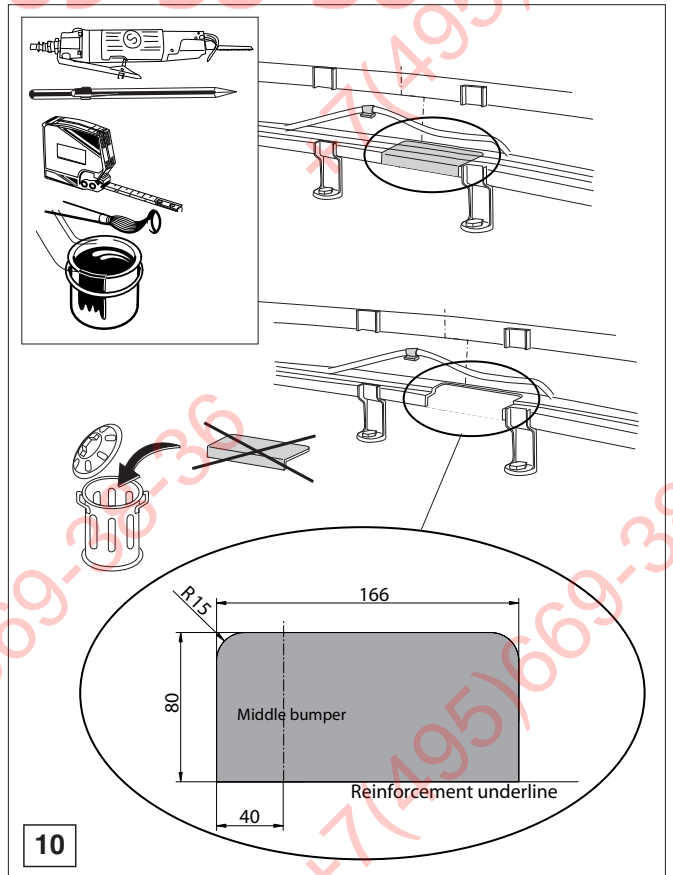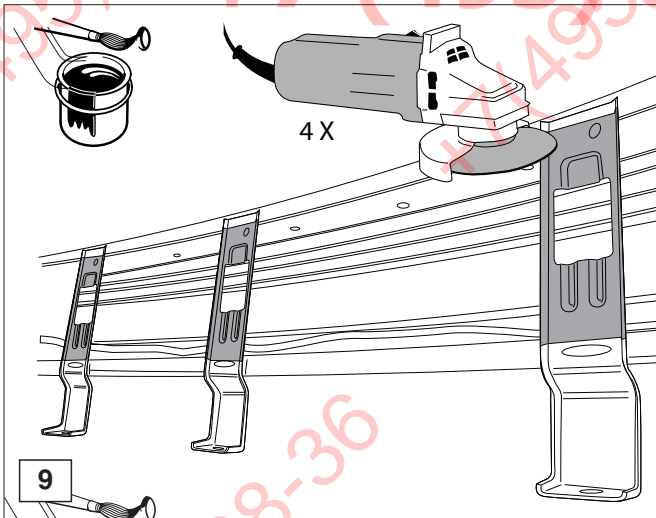

© 518470/25-01-2012/10

+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36

ФАРКОГ.РФ
+7 (495) 669-38-36

+7(495)669-38-36

+7(495)669-38-36


+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36

Template 5184 Santa Fé; 2006-2009

Place on outside bumper

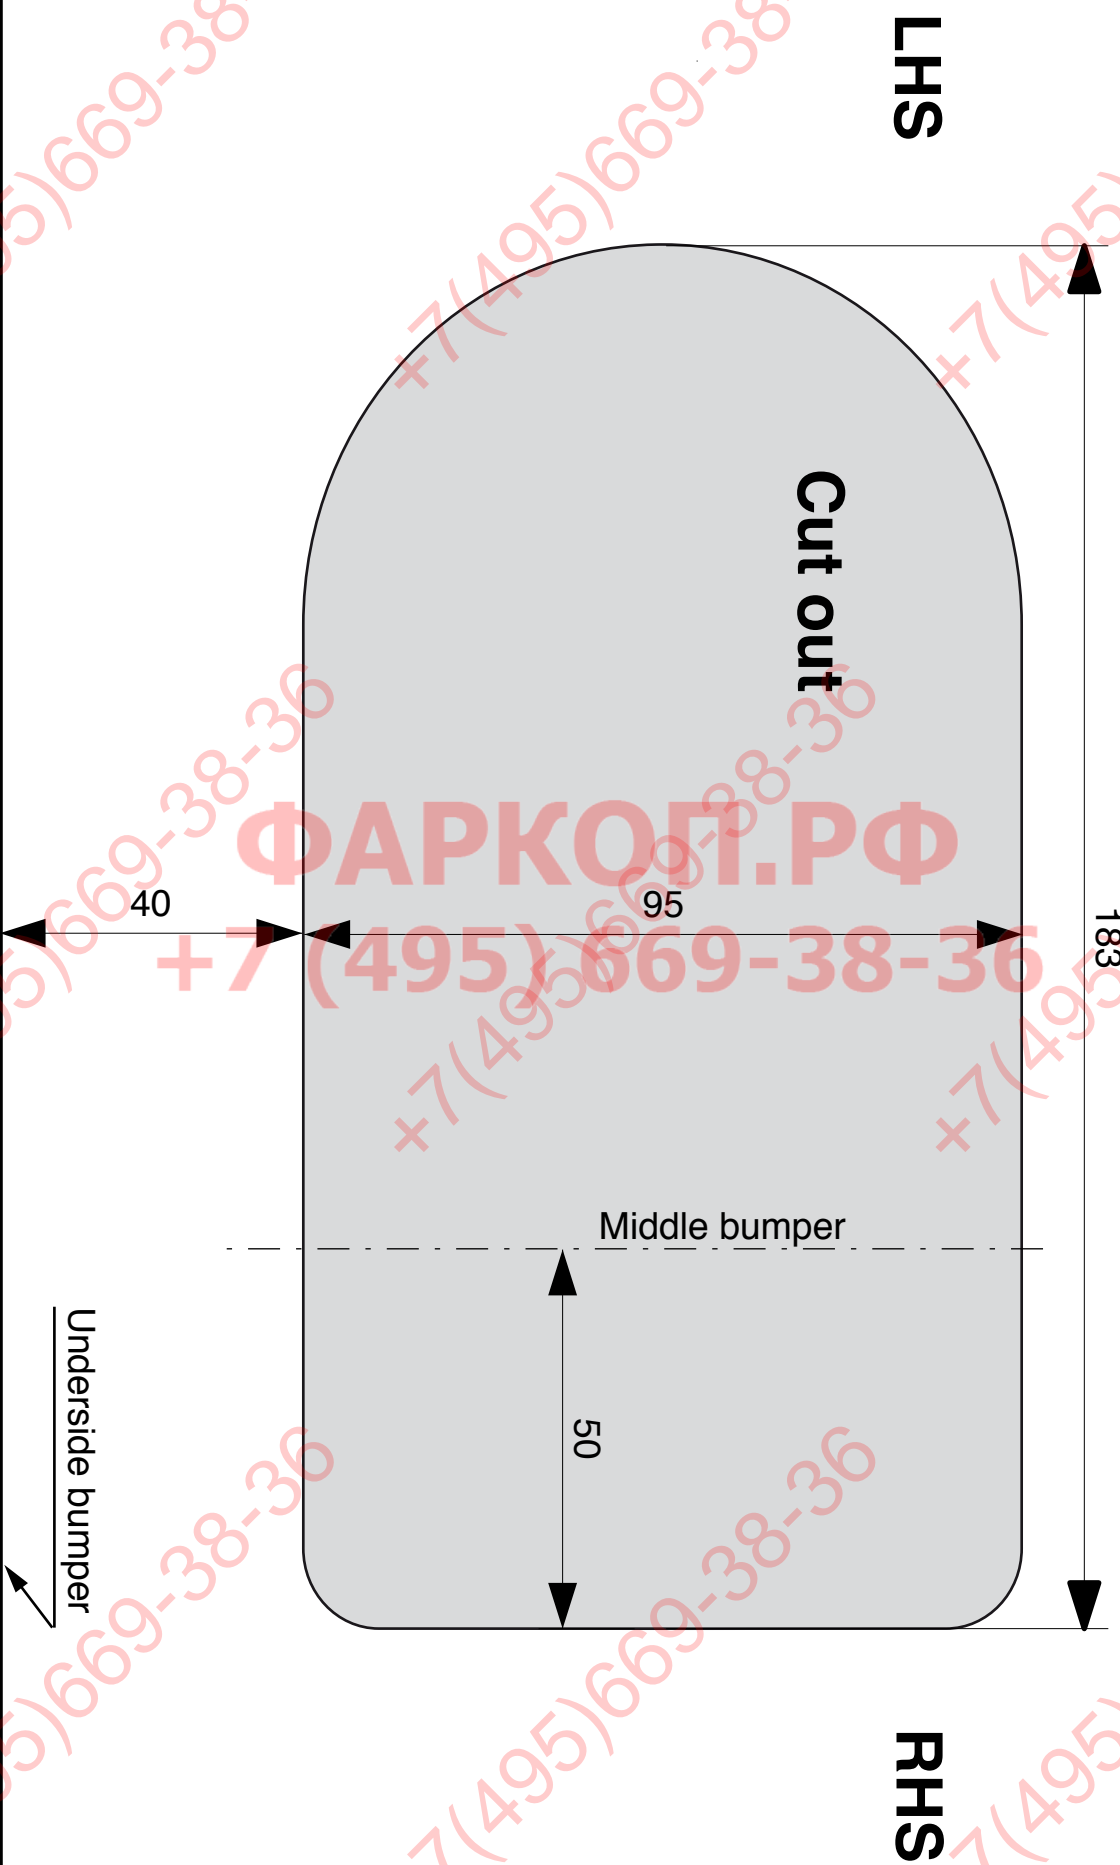

+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36

ФАРКОГ.РФ
+7 (495) 669-38-36

+7(495)669-38-36

+7(495)669-38-36


+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36

Template 5184 Santa Fé; 2009-2011 Face lift

Place on outside bumper

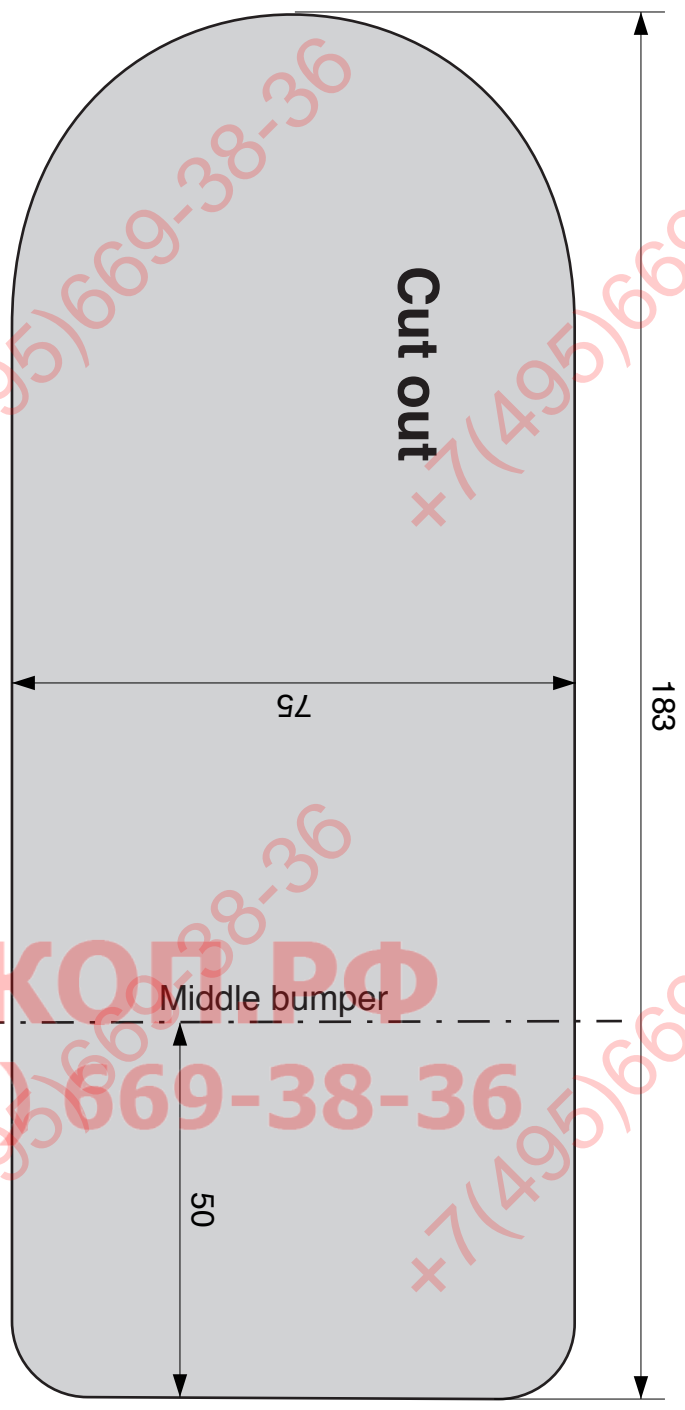

ФАРКОП.РФ

+7 (495) 669-38-36

+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36