

# bosal

**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 6735 А  
для автомобилей  
Kia Carens**

## ФАРКОП.РФ

+7 (495) 669-38-36

	2006 -...
	1500
	75
	19,7

.....	.....
.....	VIN .....
.....	.....



462800,

« - »

18

..: (35363) 7-05-06


/ : (35363) 7-13-20

(495) 785-66-07

www.bosal-autoflex.ru

« - »:	" (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495)745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

41.55-2005.

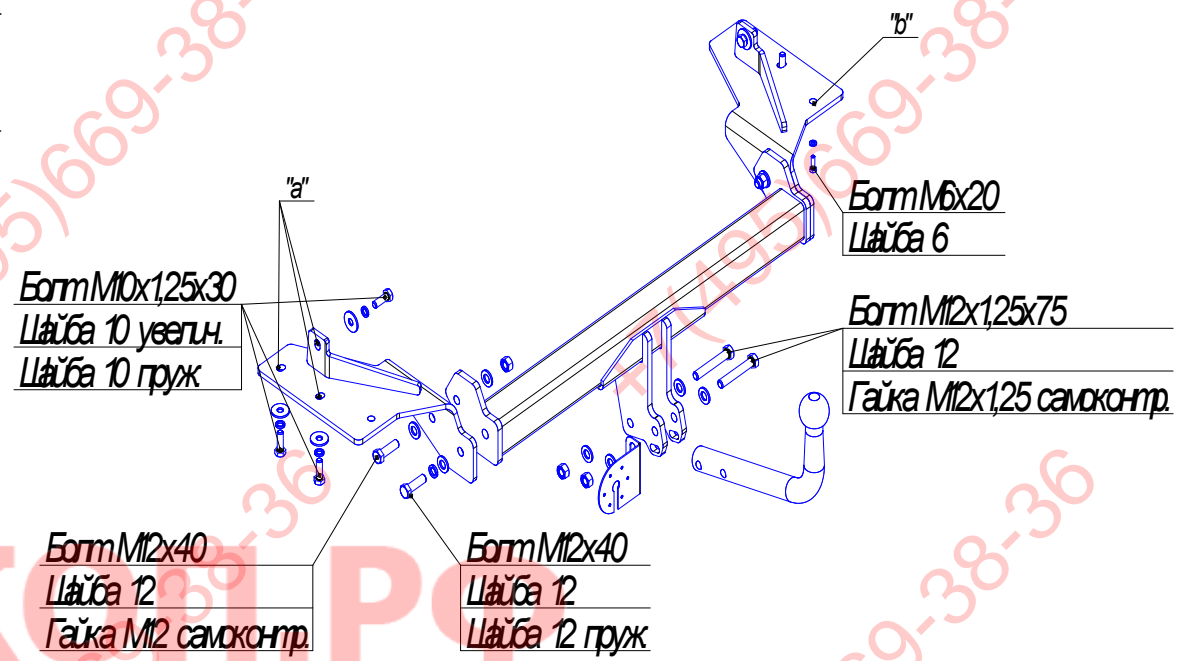

«а».

«б».

	1 .
	2 .
	1 .
	1 .

	3 .
12 1,25 75	2 .
12 40	4 .
10 1,25 30	6 .
6 20	1 .
12	2 .
12 1,25	2 .
12	2 .
12	10 .
10	6 .
10	6 .
6	1 .
VH 0841	1 .
	1 .
	1 .
	1 .
190	1 .
	1 .
	1 .
	1 .

