

# bosal

**Инструкция по монтажу  
тягово-сцепного устройства  
шарового типа 7010 А  
для автомобилей  
Volvo XC90**

## ФАРКОМ.РФ

+7 (495) 669-38-36

	2002/3-...
	2000
	75
	23,1

.....  
..... VIN .....




462800,

18

« - »  
.: (35363) 7-05-06  
./ : (35363) 7-13-20  
(495) 785-66-07  
[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)

« - »	.....
" (8182) 22-48-15	.....
" 8(8442) 98-74-98	.....
" 8(343) 379-39-89, 373-42-73	.....
" 8(343) 26-88-308	.....
" 8(3952) 710-194	.....
" 8(495) 777-54-59	.....
" 8(495) 745-79-11	.....
" 8(495) 788-95-97	.....
" 8(495) 720-51-03	.....
" 8(3532) 57-99-85	.....
" 8-905-899-5012	.....
" 8(383) 291-59-60	.....
" 8(831) 279-53-24	.....
" 8(3422) 98-27-20	.....
" 8(342) 220-87-87	.....
" 8-927-002-90-06	.....
" 8(3462) 24-00-44	.....
" 8(3842) 21-14-76	.....
" 8-902-940-4151	.....
" 8(3452) 32-22-12, 41-52-62	.....
" 8-961-213-0278	.....
" 8-917-347-1700	.....
" 8(351) 269-44-75, 900-72-73	.....
" 8(3512) 773-76-91	.....

41.55-2005.

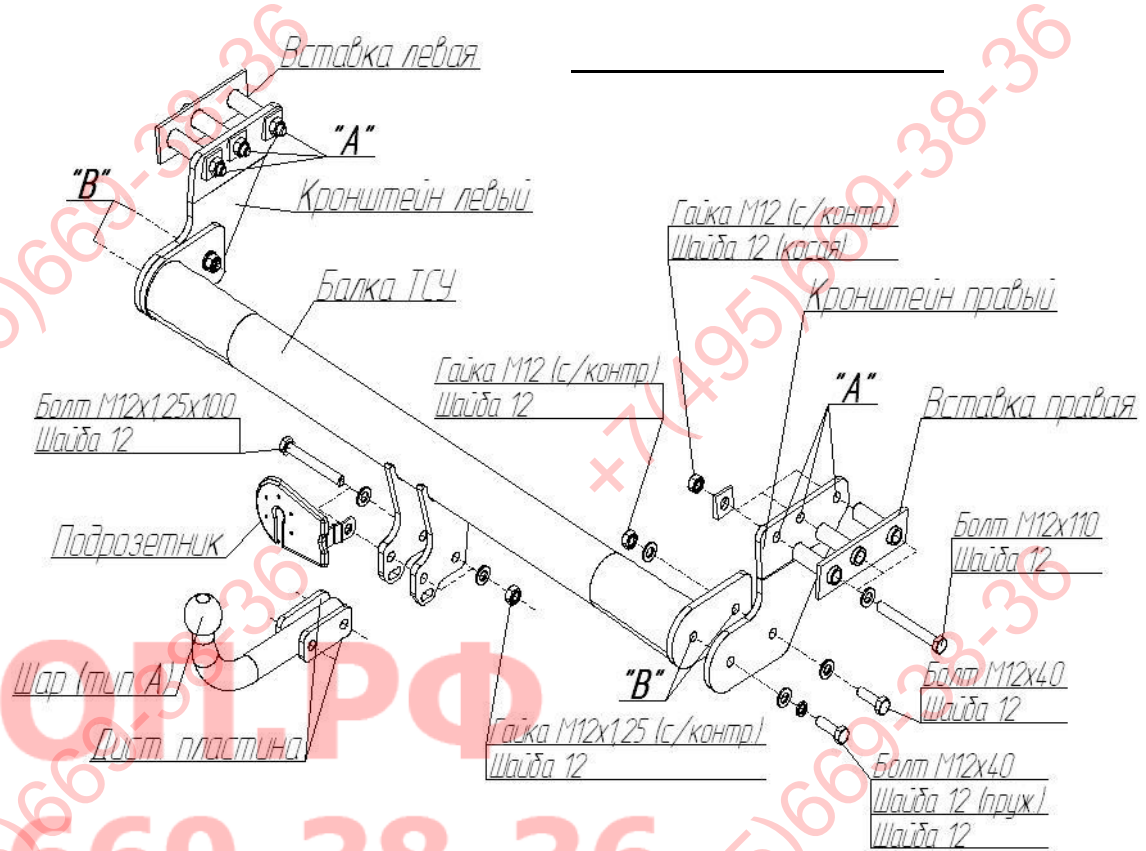


ФАРКОЛПРОФ

+7 (495) 669-38-36

1			
2			
3			
4			
5			
6			
7			

	1
	1
	1
	1
	1

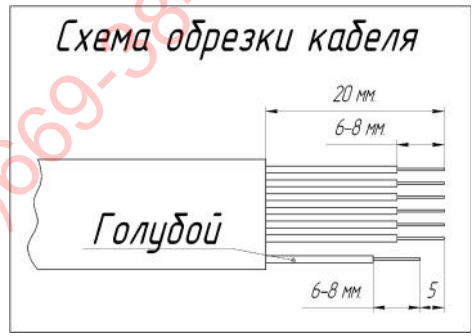

	3
12 40	4
12 1,25 100	2
12 110	6
12 ( / .)	8
12 1,25 ( / .)	2
12 ( .)	2
12 ( .)	6
12	16
	1
	1
	2
VH0212	1
	1
	1
190	1
	1
	1