


КА СW 71 103 010



ИНСТРУКЦИЯ ПО МОНТАЖУ комплекта электропроводки для фаркопа с 7-ми контактной розеткой (ГОСТ 9200-76)





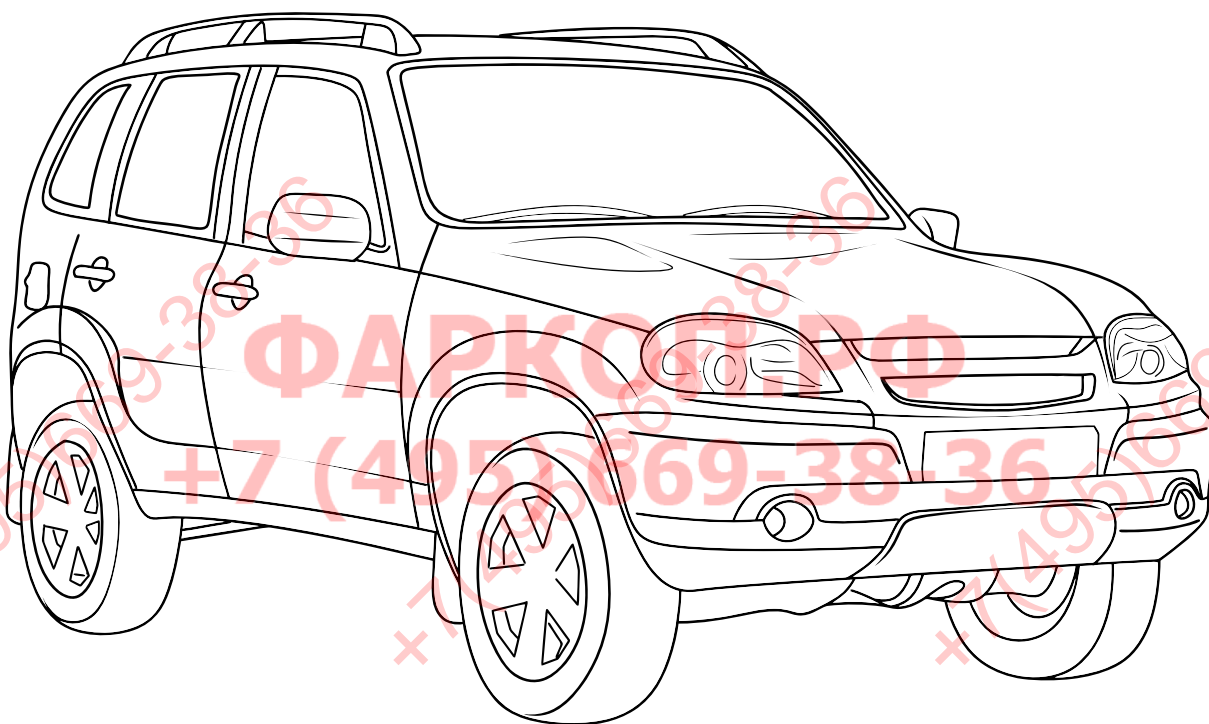


Для Chevrolet Niva 2002-2020

1.
2.



3.






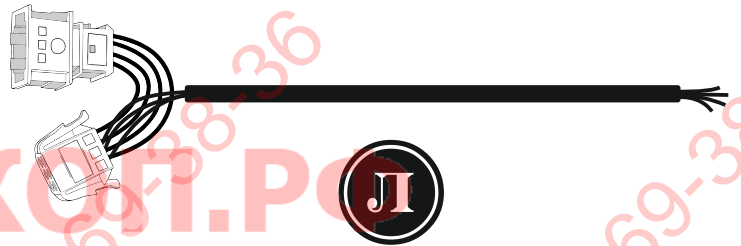
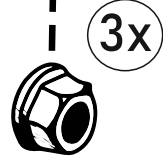
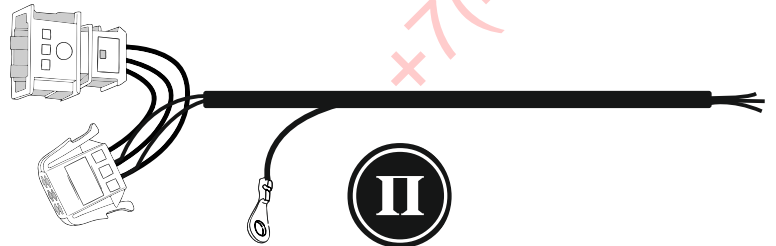
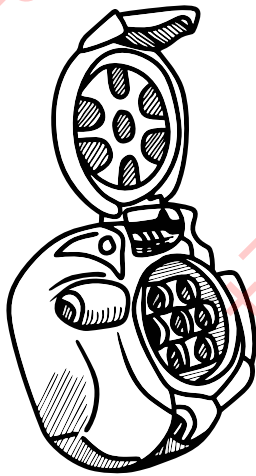
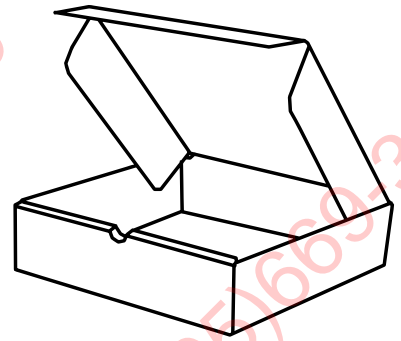




ФАРКОТ.РФ



+7 (495) 669-38-36

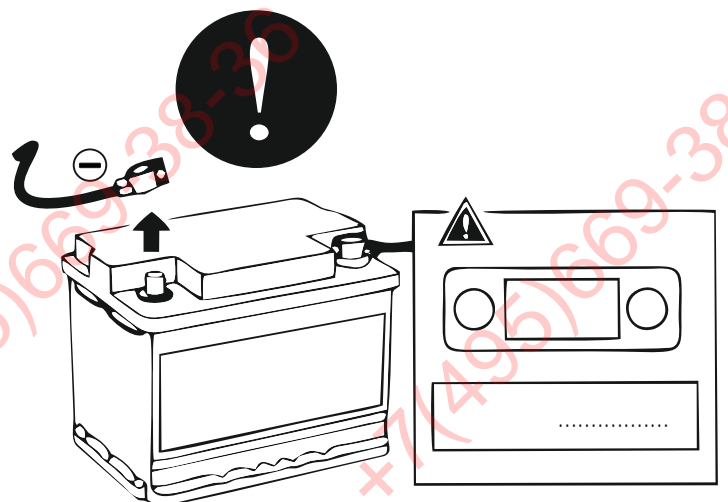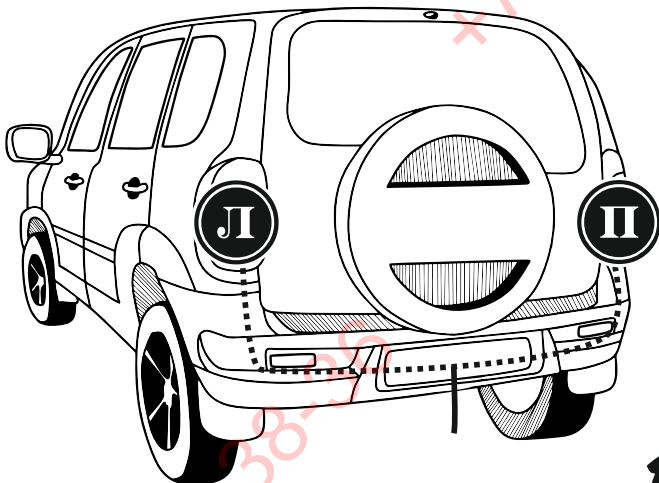

[Empty rectangular box]

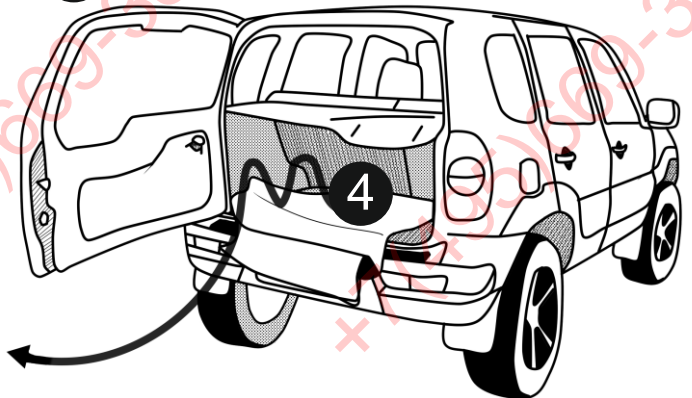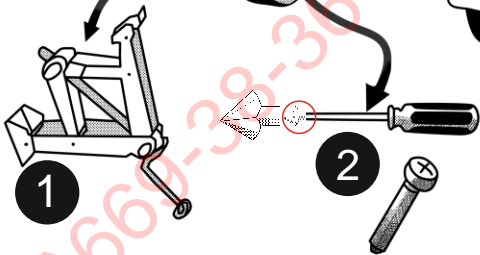
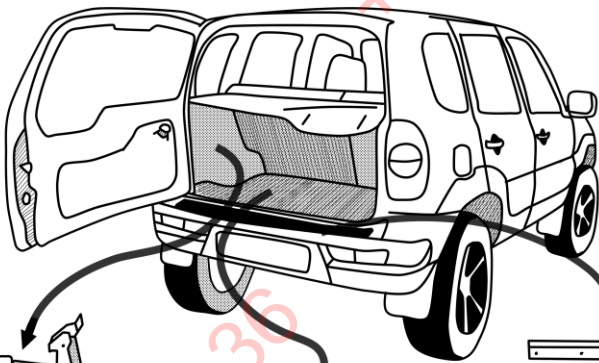
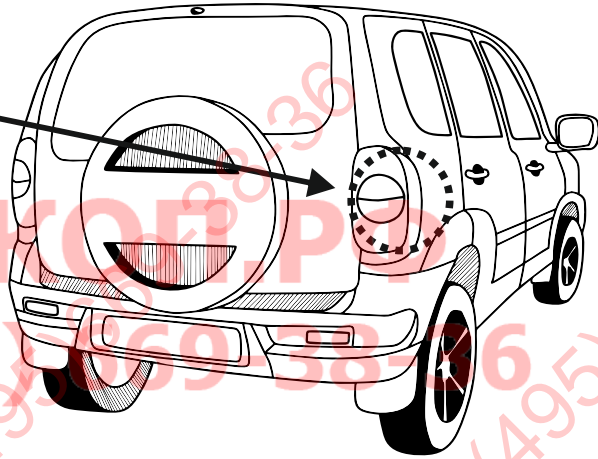
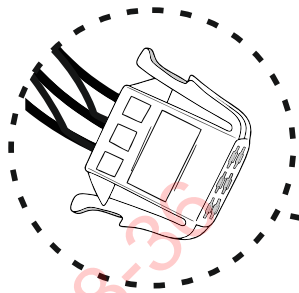
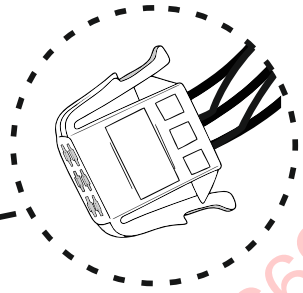
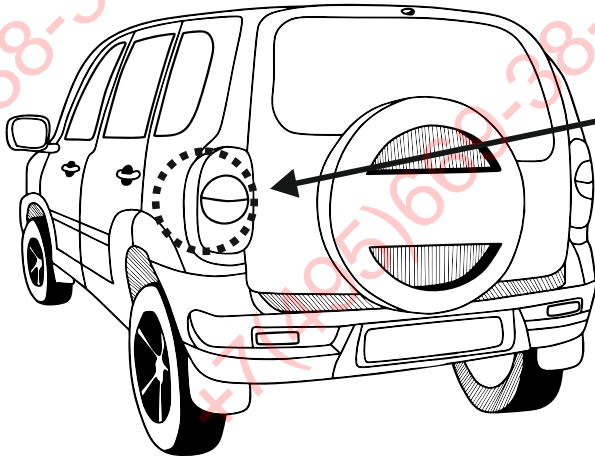


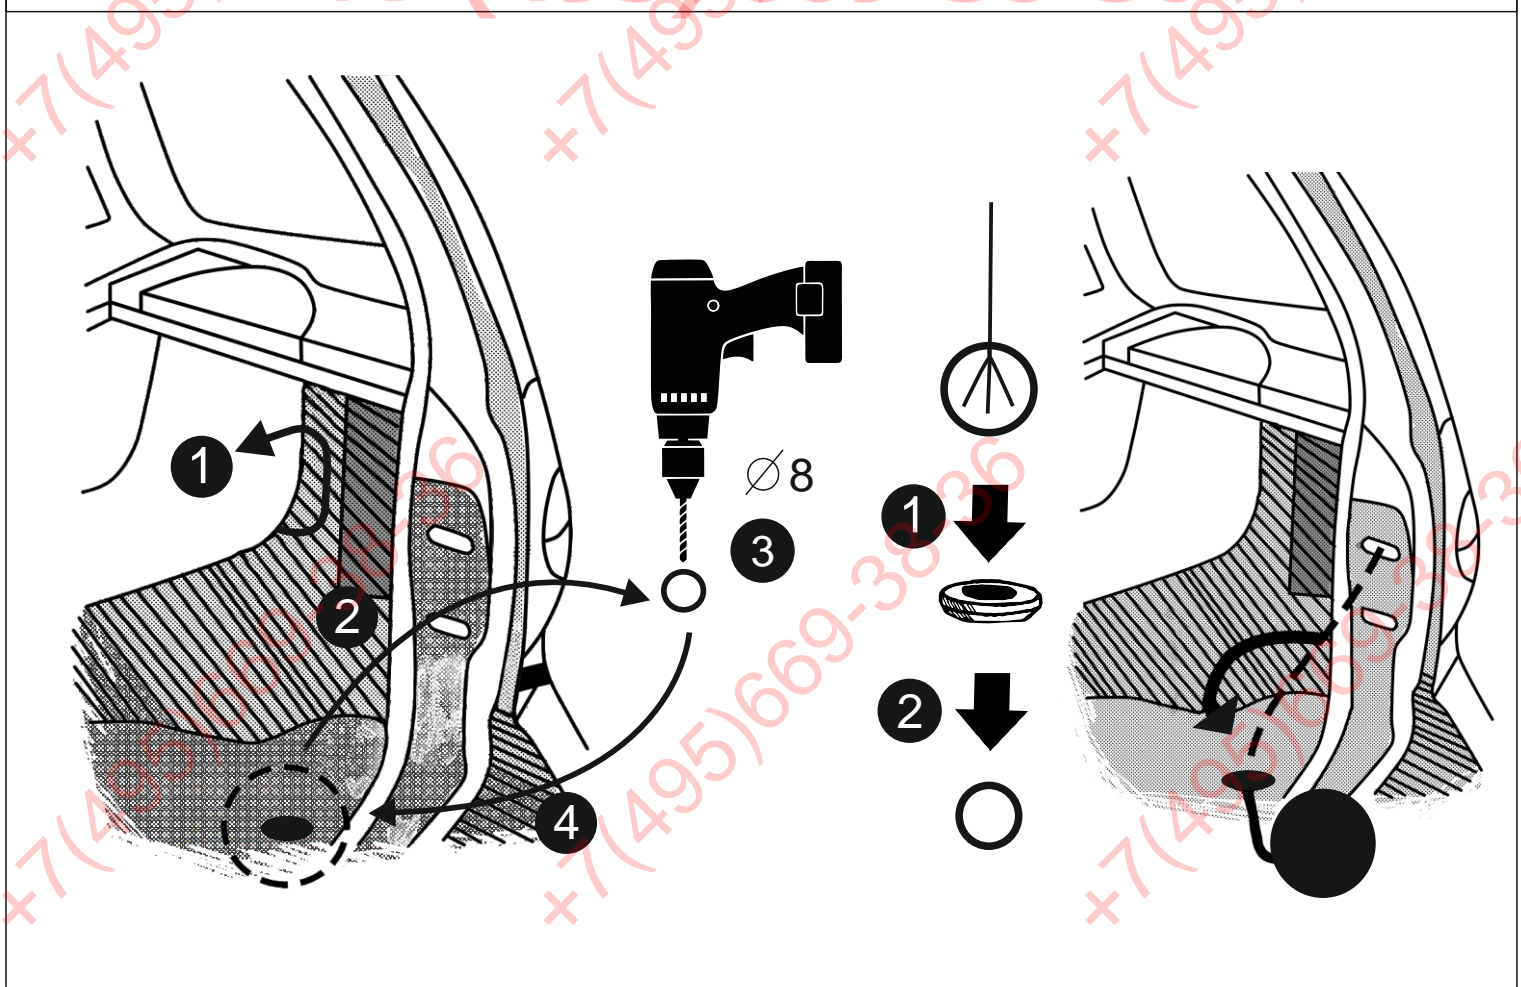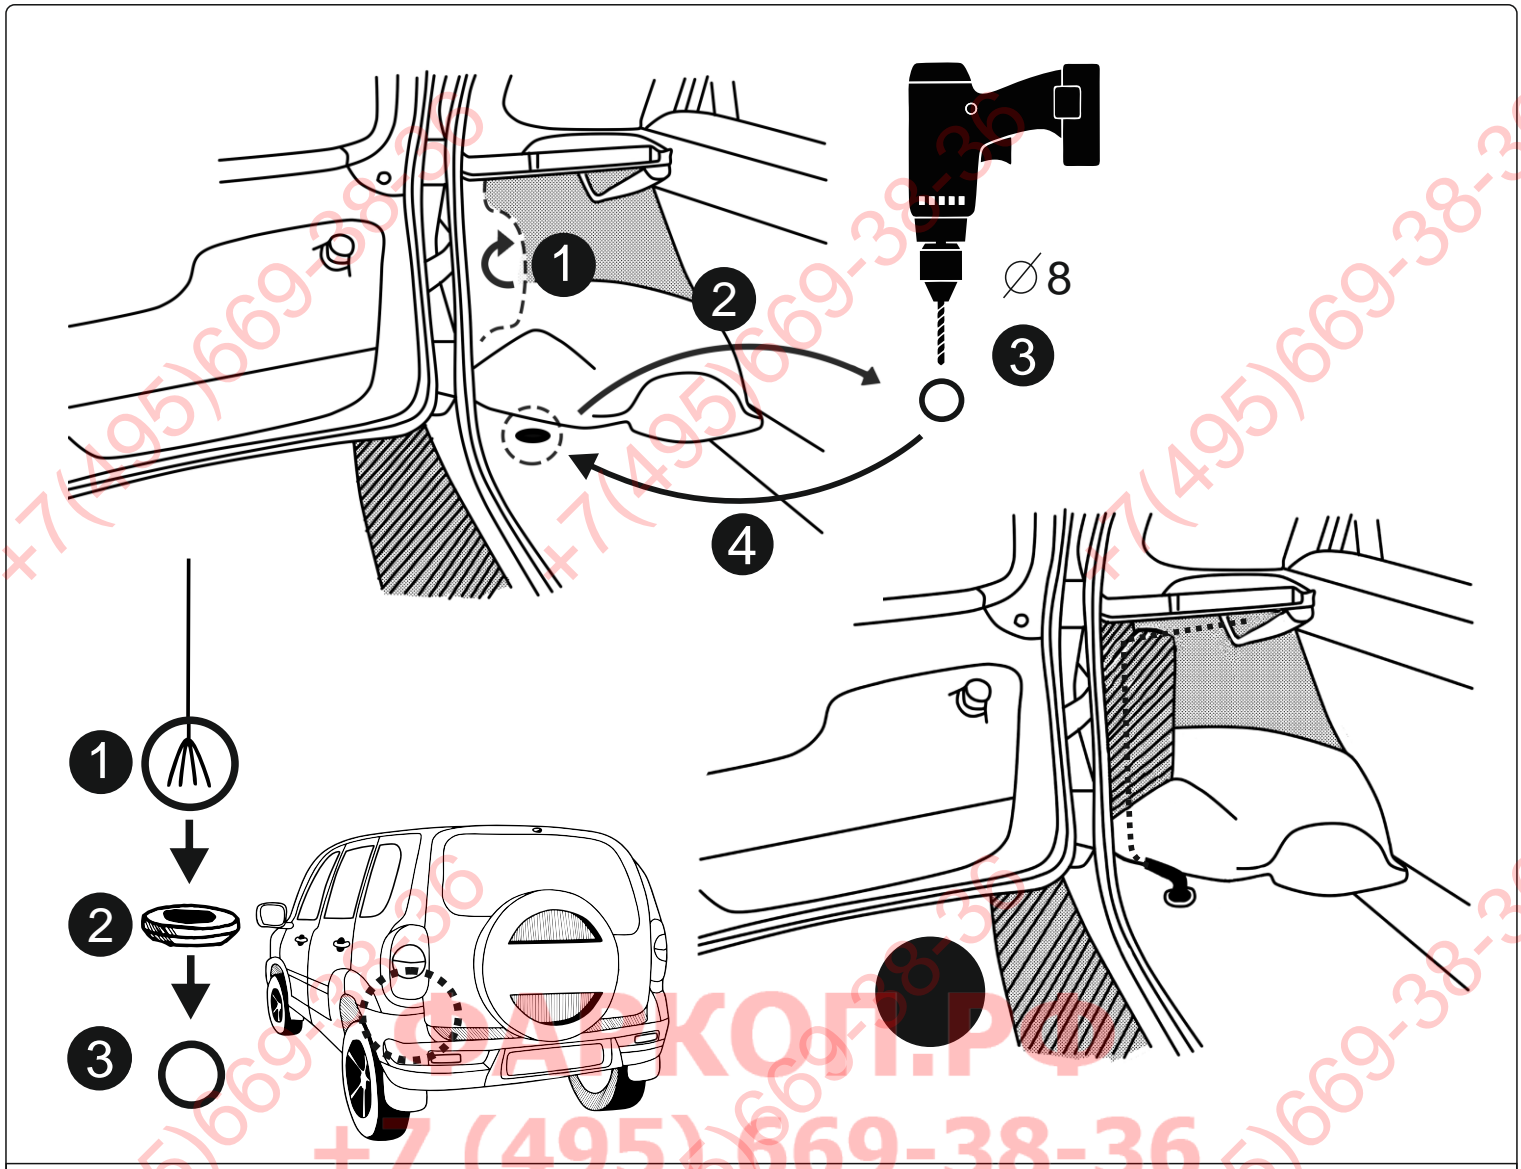

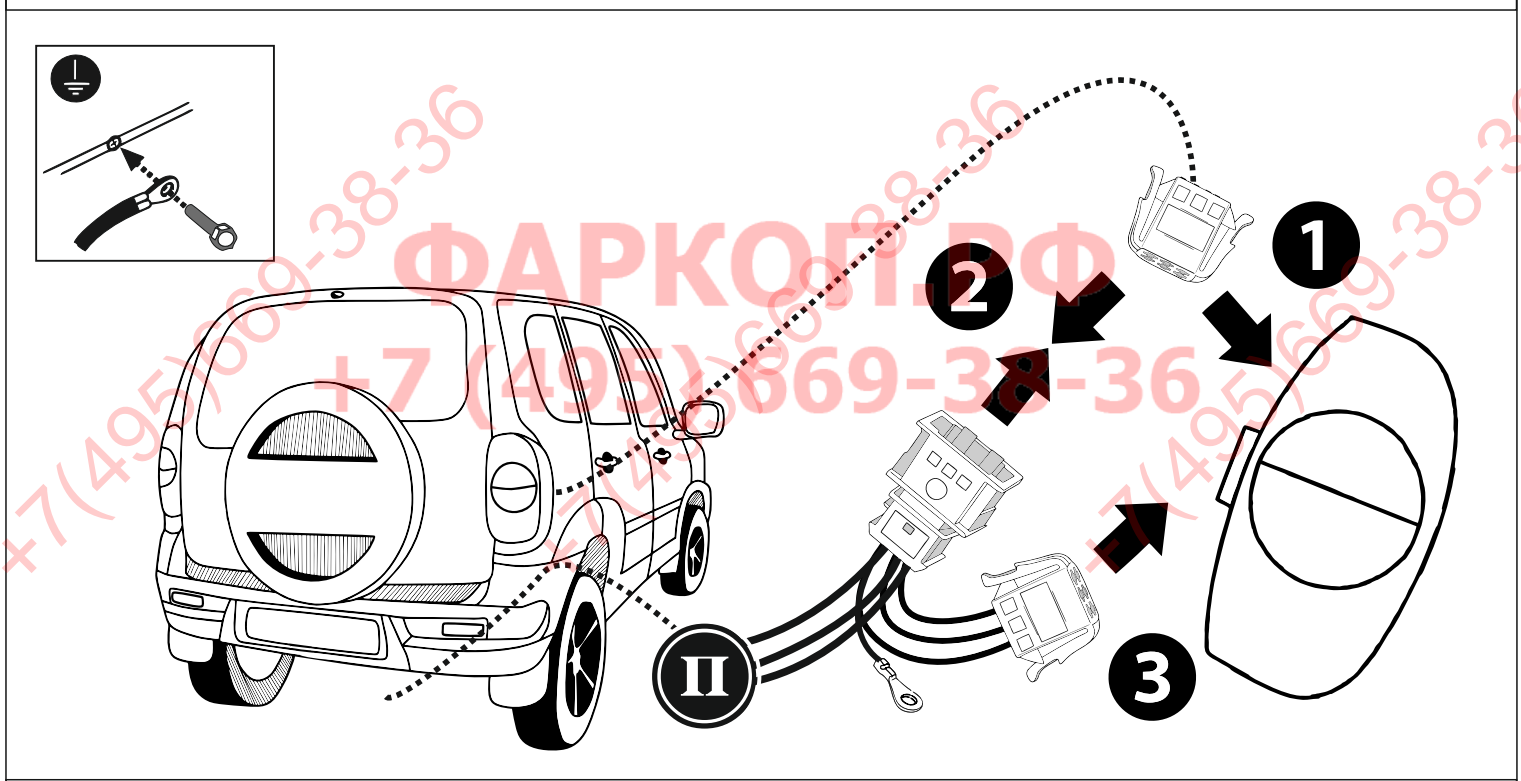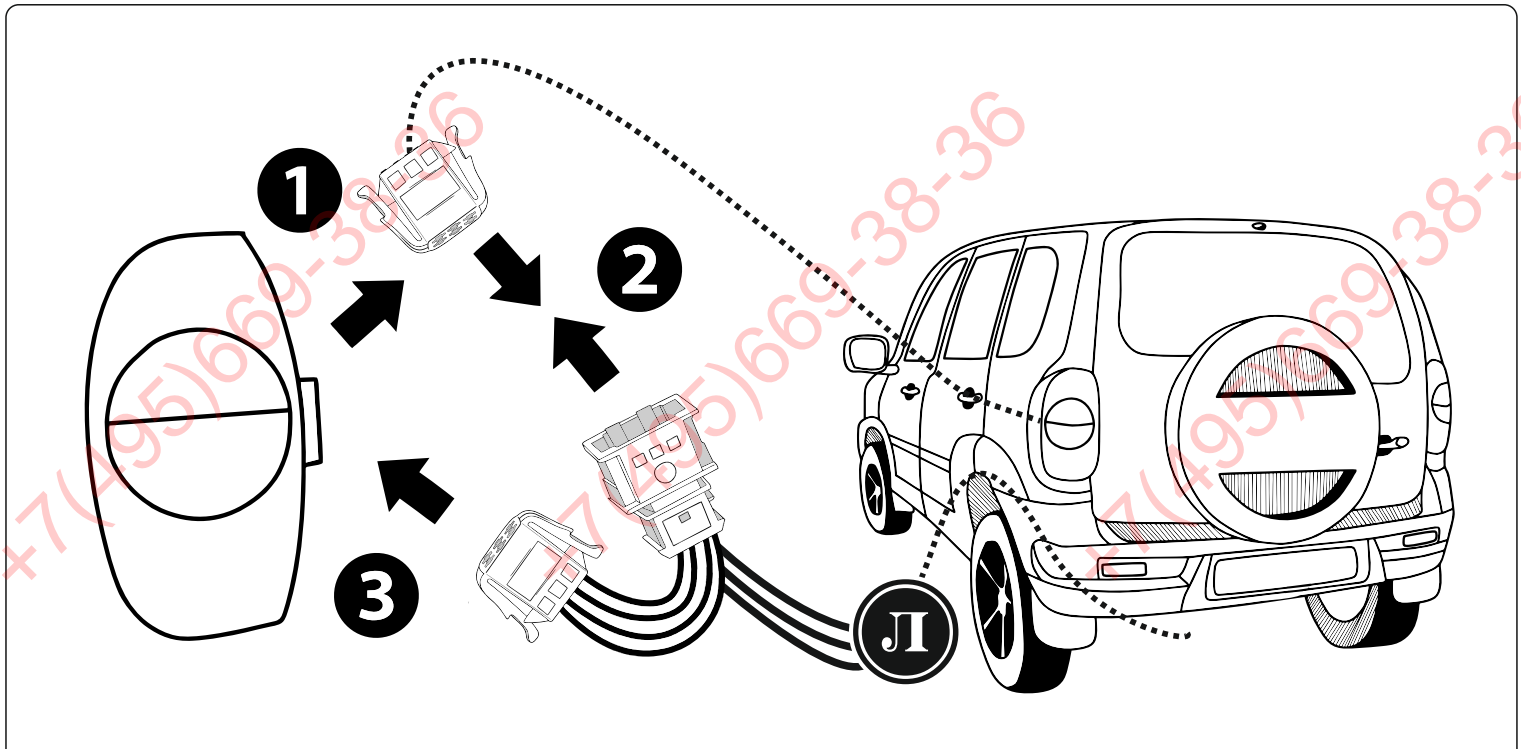

9200-76

9200-76							
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
	21W	2x21W		21W	21W	2x21W	21W
					-		

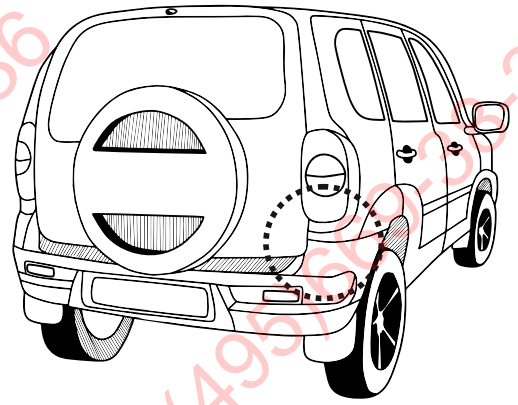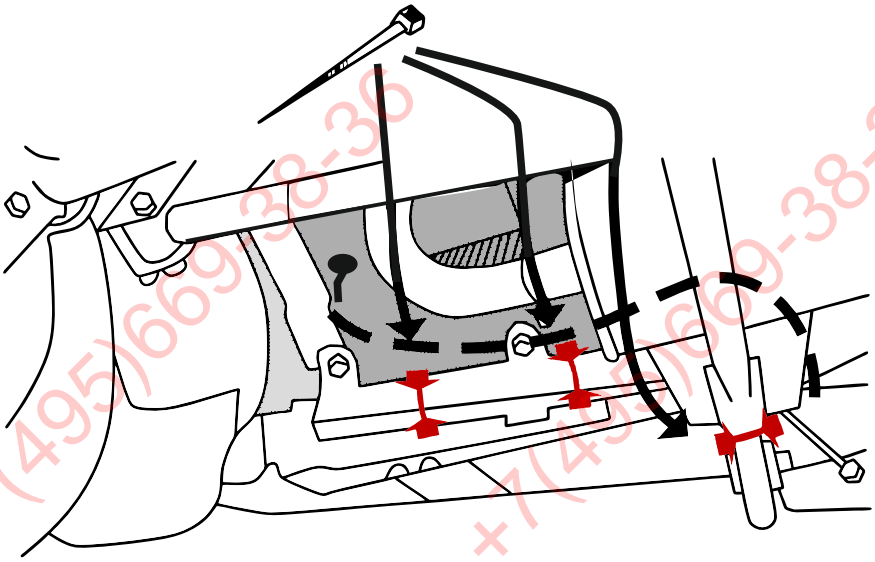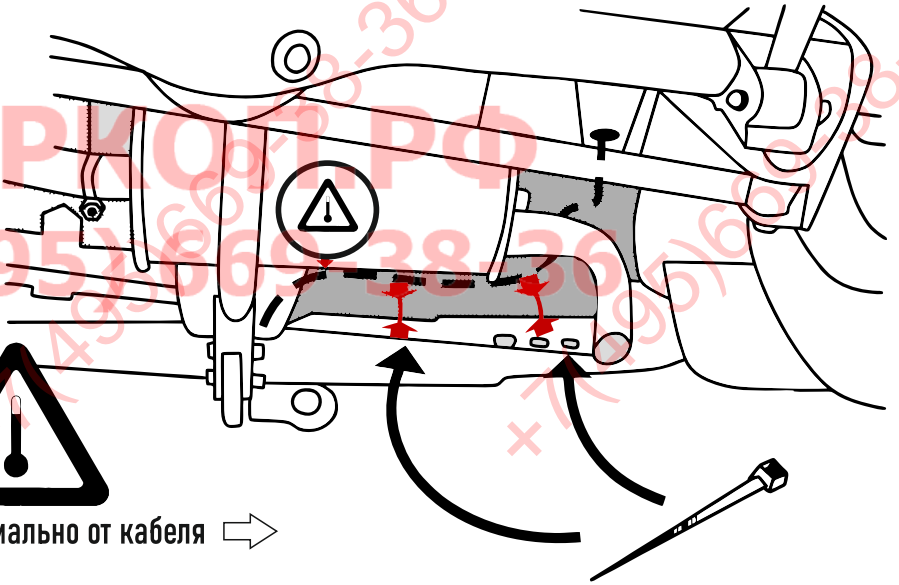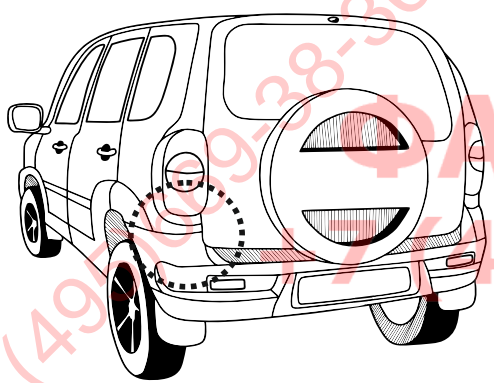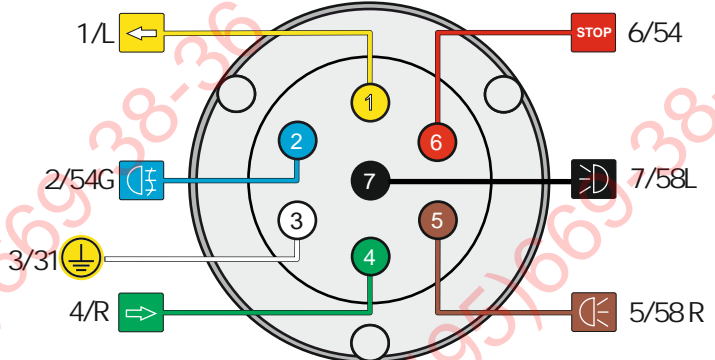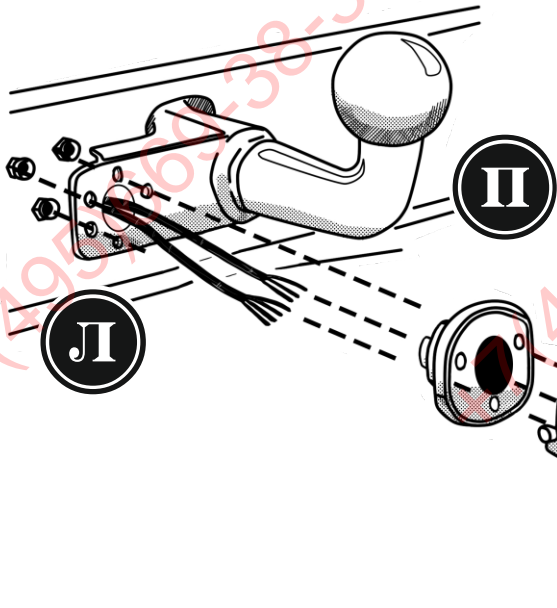



RUS

