#### FITTING INSTRICUTION

Clan	ıp mark			
in ac	cc. with	Cables joining		
ISO	PN			
1	L	Left directional lights		_ 4
2	+	Rear fog lights		, -
3	31	Ground		<u>_</u>
4	R	Right directional lights	M12x1,25x40 —	• 4
5	58R	Right side parking lights	M12x1,23x40 —	\\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\
6	54	Stoplights	<b>4</b>	
7	58L	Left side parking lights		
>	1		1	
9000	5			- M12x70 - M12x75 - 13
	M12x1	M12x40	+7/3(4)	95

This towbar is designed to assembly in following cars: **TOYOTA RAV-4, model with the spare wheel,** produced since 2009, catalogue no. **O75** and is prepared to tow trailers max total weight **2000 kg** and max vertical load **75 kg**.

## From manufacturer

Thank you for buying our product. Their reliability has been confirmed in many tests. Reliability of towbar depends also on correct assembly and right operation. For this reasons we kindly ask to read carefully this instruction and apply to hints.

The towbar should be installed in points described by a car producer.

# The instruction of the assembly

- 1. For the purpose of installing of the towbar it is not necessary to disassemble the bumper.
- 2. From the bottom of chassis members are factory-made assembly holes. One ought to fix to them side brackets of the towbar (pos. 4 and 5) using bolts M12x1,25x40mm (pos. 9) loosely.
- 3. Slip the main bar of the towbar (pos. 1) between brackets (pos. 4 and 5) and fix using bolts M12x40mm (pos. 8).
- 4. Fix tow-ball (pos. 2) and socket plate (pos. 3) using bolts M12x75mm (pos. 6) and M12x70mm (pos. 7) from accessories.
- 5. Tighten all bolts according to the torque shown in the table.
- 6. Connect electric wires of 7-poles socket according to the instruction of the car. (Recommend to make at authorized service station).
- 7. Complete paint layer damaged during installation.

Torque settings for nuts and bolts (8,8):				
<b>M6</b> - 11 Nm	M 8 - 25 Nm	<b>M 10 -</b> 50 Nm		
<b>M 12</b> - 87 Nm	M 14 - 138 Nm	<b>M16 -</b> 210 Nm		


### **NOTE**

After install the towbar you should get adequate note in registration book (at authorised service station). The car should be equipped with:

- Indicators
- Tow mirrors

After 1000km of exploitation check all bolts and nuts. The ball of towbar must be always kept clear and conserve with a grease.

### Towbar accessories:

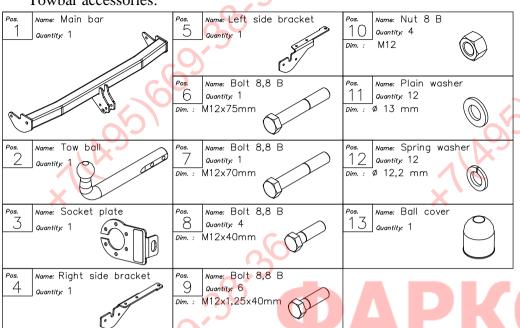



# PPUH AUTO-HAK S.J.

Produkcja Zaczepów Kulowych Henryk & Zbigniew Nejman 76-200 SŁUPSK ul. Słoneczna 16K tel/fax (059) 8-414-414; 8-414-413 E-mail: office@autohak.com.pl

## **Towing hitch (without electrical set)**

Class: **A50-X** Cat. no. **O75** 

Designed for:

Manufacturer: **TOYOTA** 

Model: RAV-4

model with the spare wheel

produced since 2009

Technical data: D-value: 10,4 kN

maximum trailer weight: 2000 kg maximum vertical cup load: 75 kg

Approval number according to Directive 94/20/EC: e20\*94/20\*0774\*00

+7 (495) 69-38-36

This towbar is designed according to rules of safety traffic regulations. The towing hitch is a safety component and can be install only by qualified personnel. Any alteration or conversion of the towing hitch is prohibited and would lead to cancellation of design certification. Remove insulating compound and underseal from vehicle (if present) in the area of the matting surfaces of the towing hitch.

The vehicle manufacturer's specifications regarding trailer load and max. vertical

The vehicle manufacturer's specifications regarding trailer load and max. vertical cup load are decisive for driving whereat values for the towing hitch cannot be exceeded.

*D-value formula:* 

Max trailer weight [kg] x Max vehicle weight [kg]

Max trailer weight [kg] + Max vehicle weight [kg] 

X 9,81 = D [kN]