

 **AUDI Q5**

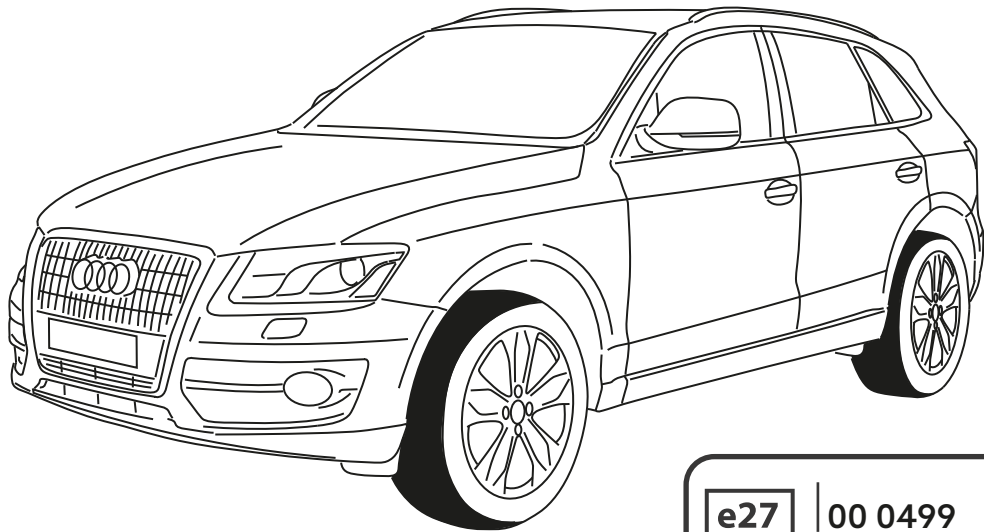





 **2008 - 2016**

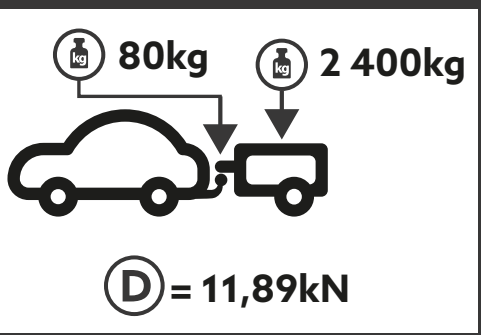

e27 | **00 0499**

$$D = \frac{\text{MAX kg} \times \text{MAX kg}}{\text{MAX kg} + \text{MAX kg}} \times 0,00981$$



-  P14 - 1x
-  P10 - 4x
-  P8 - 1x
PP10 - 6x
PP12 - 2x (A, I)
PP12 - 4x (C)
-  SM8 - 1x
 M10 - 2x
M12 - 2x (A, I)
-  M8x40 - 1x
M10x100 - 6x
M12x70 - 2x (A)
M12x90 - 2x (I)
M12x19 - 4x (C)

