


КА SW 71 105 020



ИНСТРУКЦИЯ ПО МОНТАЖУ комплекта электропроводки для фаркопа с 7-ми контактной розеткой (ГОСТ 9200-76)

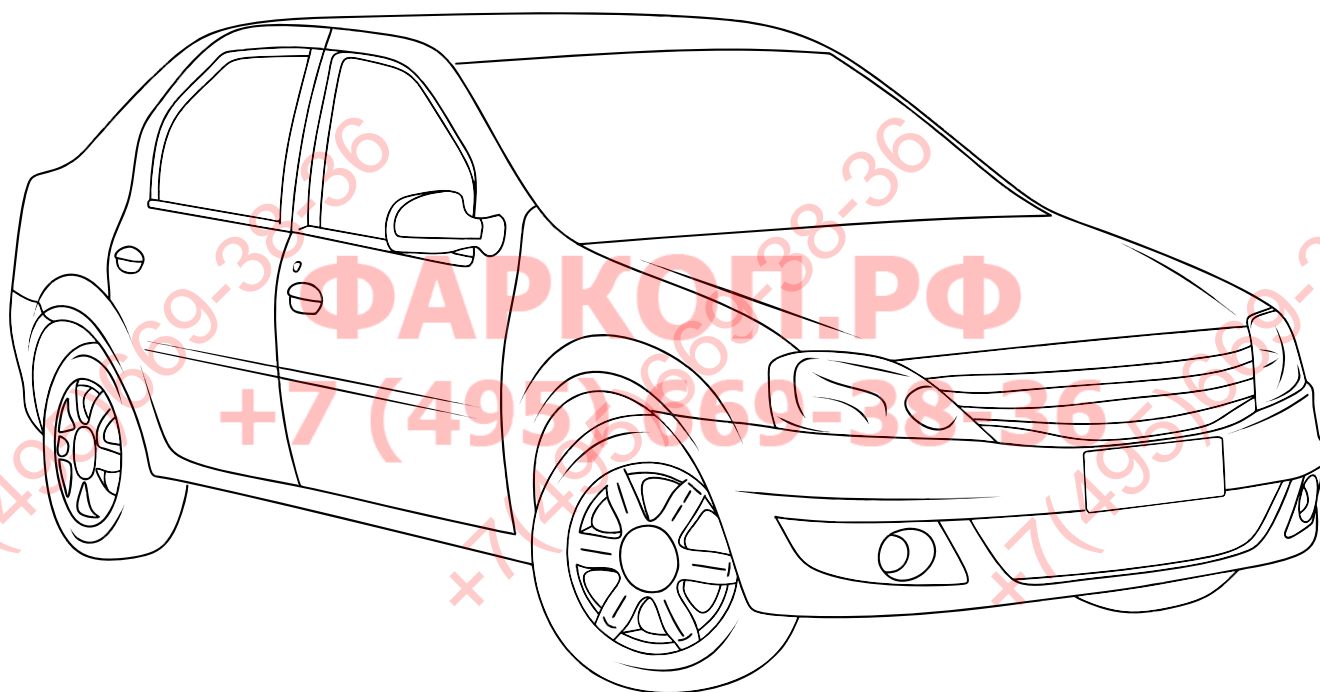




Для Renault Logan 2009-2014

1.
2.


3.



[Empty box]

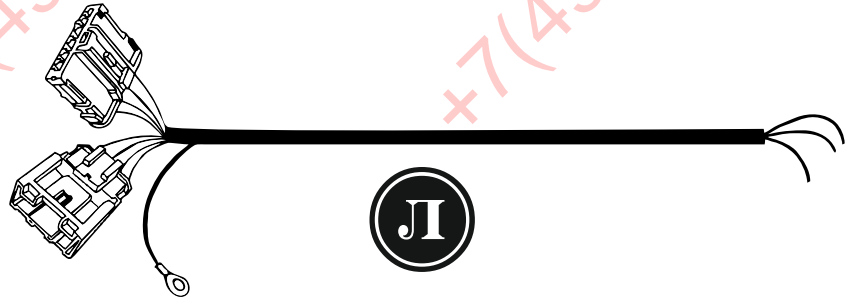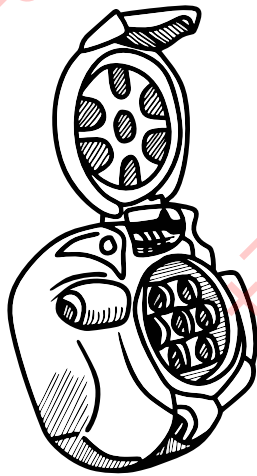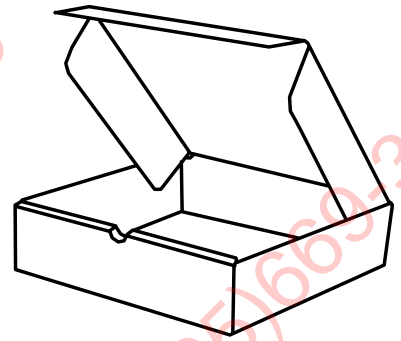

3x

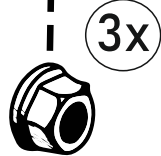



3x



ФАРКОГ.Р

+7 (495) 669-38-36

[Empty box]

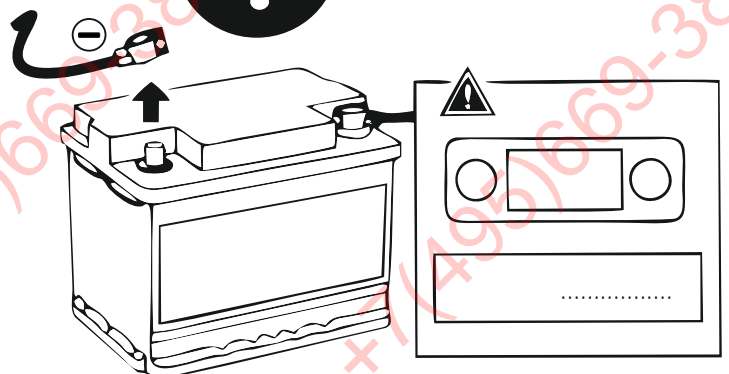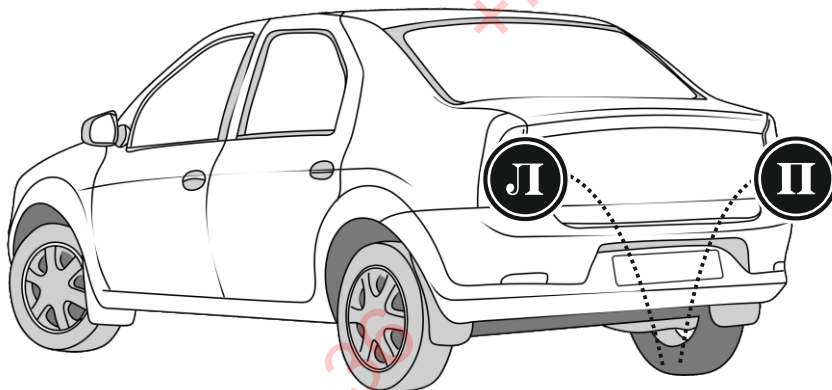

+7(495)669-38-36

+7(495)669-38-36

+7(495)669-38-36

[Empty rectangular box]

