

KA CW 71 105 030

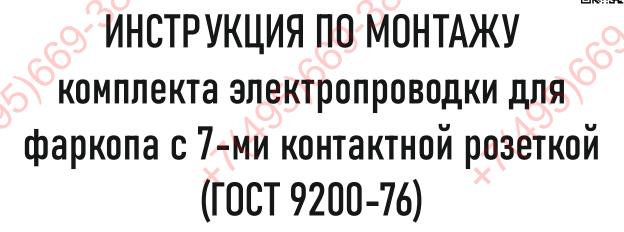

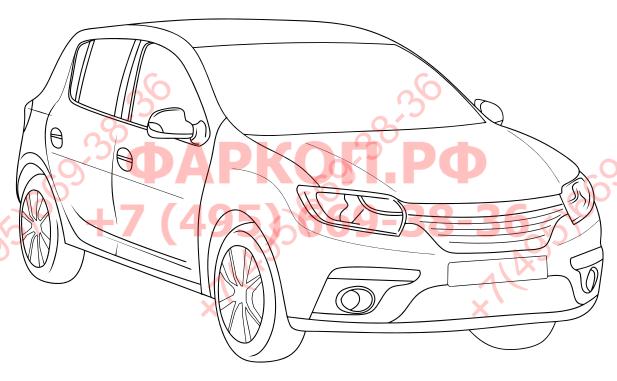

Для Renault Sandero 2014-

1. 2.

3.

4.

